



REV	00
Date	January 2020
Supersedes	/

## Operating Manual D-EOMHP01301-20\_00EN

### Air Cooled chiller/heat pump with scroll compressors

EWYT\_B

## TABLE OF CONTENTS

<b>1</b>	<b>SAFETY CONSIDERATIONS</b>	<b>4</b>
1.1	General	4
1.2	Before switching the unit	4
1.3	Avoid electrocution	4
<b>2</b>	<b>GENERAL DESCRIPTION</b>	<b>5</b>
2.1	Basic Information	5
2.2	Abbreviations used	5
2.3	Controller Operating Limits	5
2.4	Controller Architecture	5
2.5	Communication Modules	6
<b>3</b>	<b>USING THE CONTROLLER</b>	<b>6</b>
3.1	Navigating	6
3.2	Passwords	6
3.3	Editing	7
3.4	Basic Control System Diagnostic	7
3.5	Controller maintenance	8
3.6	Optional Remote User Interface	8
3.7	Embedded Web Interface	8
<b>4</b>	<b>WORKING WITH THIS UNIT</b>	<b>10</b>
4.1	Chiller On/Off	10
4.1.1	Keypad On/Off	10
4.1.2	Scheduler and Silent mode functionalities	11
	The Fan Silent Mode function can be enabled only for units equipped with VFD fans.	12
4.1.3	Network On/Off	12
4.2	Water Setpoints	12
4.3	Unit Mode	13
4.3.1	Energy Saving mode	14
4.4	Unit Status	14
4.5	Network Control	15
4.6	Thermostatic Control	16
4.7	Date/Time	17
4.8	Pumps	17
4.9	External Alarm	18
4.10	Power Conservation	18
4.10.1	Demand Limit	18
4.10.2	Setpoint Reset	19
4.10.2.1	Setpoint Reset by OAT (A/C units only)	20
4.10.2.2	Setpoint Reset by External 4-20Ma signal	21
4.10.2.3	Setpoint Reset by DT	21
4.11	Electrical Data	22
4.12	Controller IP Setup	23
4.13	Daikin On Site	24
4.14	Heat Recovery	25
4.15	Rapid Restart	25
<b>5</b>	<b>ALARMS AND TROUBLESHOOTING</b>	<b>27</b>
5.1	Unit Alerts	27
5.1.1	BadLWTRreset - Bad Leaving Water Temperature Reset Input	27
5.1.2	EnergyMeterComm - Energy Meter Communication Fail	27
5.1.3	EvapPump1Fault - Evaporator Pump #1 Failure	27
5.1.4	EvapPump2Fault - Evaporator Pump #2 Failure	28
5.1.5	ExternalEvent - External Event	28
5.1.6	HeatRec EntWTempSen - Heat Recovery Entering Water Temperature sensor fault (A/C units only)	28
5.1.7	HeatRec LvgWTempSen - Heat Recovery Leaving Water Temperature sensor fault (A/C units only)	29
5.1.8	HeatRec FreezeAlm - Heat Recovery Water Freeze Protect alarm (A/C units only)	29
5.1.9	Option1BoardComm - Optional board 1 communication fail (A/C units only)	29
5.1.10	Option2BoardComm - Optional board 2 communication fail	29
5.1.11	Option3BoardComm - Optional board 3 communication fail	30

5.2	Unit Pumpdown Alarms.....	30
5.2.1	UnitOff EvpEntWTempSen - Evaporator Entering Water Temperature (EWT) sensor fault.....	30
5.2.2	UnitOffLvgEntWTempSen - Evaporator Leaving Water Temperature (LWT) sensor fault .....	30
5.2.3	UnitOffAmbTempSen - Outside Air Temperature sensor fault (A/C units only) .....	31
5.3	Unit Rapid Stop Alarms .....	31
5.3.1	UnitOffEvapWaterTmpLow - Evaporator Water Temperature Low alarm.....	31
5.3.2	UnitOff ExternalAlarm - External alarm .....	31
5.3.3	PVM alarm (A/C units only) .....	32
5.3.4	UnitOff EvapWaterFlow - Evaporator Water Flow Loss alarm .....	32
5.3.5	UnitOff EXVDriverComm - EXV Driver Extension Communication Error.....	32
5.4	Circuit Pumpdown Stop Alarms .....	33
5.4.1	Discharge Temperature Sensor fault .....	33
5.4.2	CxOff OffSuctTempSen - Suction Temperature Sensor fault .....	33
5.4.3	CxOff GasLeakage - Gas Leakage fault .....	33
5.5	Circuit Rapid Stop alarms .....	34
5.5.1	CxOff CondPressSen - Condensing Pressure sensor fault .....	34
5.5.2	CxOff EvapPressSen - Evaporating Pressure sensor fault.....	34
5.5.3	CxOff DischTmpHigh - High Discharge Temperature Alarm.....	34
5.5.4	CxOff CondPressHigh – High Condensing Pressure alarm .....	35
5.5.5	CxOff EvapPressLow - Low Pressure alarm .....	36
5.5.6	CxOff RestartFault – Restart Fault .....	36
5.5.7	CxOff MechHighPress - Mechanical High Pressure Alarm .....	37
5.5.8	CxOff NoPressChange - No Pressure Change At Start Alarm .....	37
5.5.9	Cx FailedPumpdown - Failed Pumpdown procedure .....	37
5.5.10	CmpX Protection – Compressor Protection .....	38

## 1 SAFETY CONSIDERATIONS

---

### 1.1 General

Installation, start-up and servicing of equipment can be hazardous if certain factors particular to the installation are not considered: operating pressures, presence of electrical components and voltages and the installation site (elevated plinths and built-up up structures). Only properly qualified installation engineers and highly qualified installers and technicians, fully trained for the product, are authorized to install and start-up the equipment safely.

During all servicing operations, all instructions and recommendations, which appear in the installation and service instructions for the product, as well as on tags and labels fixed to the equipment and components and accompanying parts supplied separately, must be read, understood and followed.

Apply all standard safety codes and practices.

Wear safety glasses and gloves.



***Do not operate on a faulty fan, pump or compressor before the main switch has been shut off. Overtemperature protection is auto-reset, therefore the protected component may restart automatically if temperature conditions allow it.***

---

In some unit a push button is placed on a door of the unit electrical panel. The button is highlighted by a red color in yellow background. A manual pressure of the emergency stop button stops all loads from rotating, thus preventing any accident which may occur. An alarm is also generated by the Unit Controller. Releasing the emergency stop button enables the unit, which may be restarted only after the alarm has been cleared on the controller.



***The emergency stop causes all motors to stop, but does not switch off power to the unit. Do not service or operate on the unit without having switched off the main switch.***

---

### 1.2 Before switching the unit

Before switching on the unit read the following recommendations:

- When all the operations and all the settings have been carried out, close all the switchbox panels
- The switchbox panels can only be opened by trained personnel
- When the UC requires to be accessed frequently the installation of a remote interface is strongly recommended
- LCD display of the unit controller may be damaged by extremely low temperatures (see chapter 2.4). For this reason, it is strongly recommended to never power off the unit during winter, especially in cold climates.

### 1.3 Avoid electrocution

Only personnel qualified in accordance with IEC (International Electrotechnical Commission) recommendations may be permitted access to electrical components. It is particularly recommended that all sources of electricity to the unit be shut off before any work is begun. Shut off main power supply at the main circuit breaker or isolator.

**IMPORTANT: This equipment uses and emits electromagnetic signals. Tests have shown that the equipment conforms to all applicable codes with respect to electromagnetic compatibility.**



***Direct intervention on the power supply can cause electrocution, burns or even death. This action must be performed only by trained persons.***



***RISK OF ELECTROCUTION: Even when the main circuit breaker or isolator is switched off, certain circuits may still be energized, since they may be connected to a separate power source.***



***RISK OF BURNS: Electrical currents cause components to get hot either temporarily or permanently. Handle power cable, electrical cables and conduits, terminal box covers and motor frames with great care.***



***ATTENTION: In accordance with the operating conditions the fans can be cleaned periodically. A fan can start at any time, even if the unit has been shut down.***

## 2 GENERAL DESCRIPTION

### 2.1 Basic Information

Microtech® IV is a system for controlling single or dual-circuit air/water-cooled liquid chillers. Microtech® IV controls compressor start-up necessary to maintain the desired heat exchanger leaving water temperature. In each unit mode it controls the operation of the condensers to maintain the proper condensation process in each circuit.

Safety devices are constantly monitored by Microtech® IV to ensure their safe operation. Microtech® IV also gives access to a Test routine covering all inputs and outputs.

### 2.2 Abbreviations used

In this manual, the refrigeration circuits are called circuit #1 and circuit #2. The compressor in circuit #1 is labelled Cmp1. The other in circuit #2 is labelled Cmp2. The following abbreviations are used:

<b>A/C</b>	Air Cooled
<b>CEWT</b>	Condenser Entering Water Temperature
<b>CLWT</b>	Condenser Leaving Water Temperature
<b>CP</b>	Condensing Pressure
<b>CSRT</b>	Condensing Saturated Refrigerant Temperature
<b>DSH</b>	Discharge Superheat
<b>DT</b>	Discharge Temperature
<b>E/M</b>	Energy Meter Module
<b>EEWT</b>	Evaporator Entering Water Temperature
<b>ELWT</b>	Evaporator Leaving Water Temperature
<b>EP</b>	Evaporating Pressure
<b>ESRT</b>	Evaporating Saturated Refrigerant Temperature
<b>EXV</b>	Electronic Expansion Valve
<b>HMI</b>	Human Machine Interface
<b>MOP</b>	Maximum operating pressure
<b>SSH</b>	Suction SuperHeat
<b>ST</b>	Suction Temperature
<b>UC</b>	Unit controller (Microtech IV)
<b>W/C</b>	Water Cooled

### 2.3 Controller Operating Limits

Operation (IEC 721-3-3):

- Temperature -40...+70 °C
- Restriction LCD -20... +60 °C
- Restriction Process-Bus -25...+70 °C
- Humidity < 90 % r.h (no condensation)
- Air pressure min. 700 hPa, corresponding to max. 3,000 m above sea level


Transport (IEC 721-3-2):

- Temperature -40...+70 °C
- Humidity < 95 % r.h (no condensation)
- Air pressure min. 260 hPa, corresponding to max. 10,000 m above sea level.

### 2.4 Controller Architecture

The overall controller architecture is the following:

- One MicroTech IV main controller
- I/O extensions as needed depending on the configuration of the unit
- Communications interface(s) as selected
- Peripheral Bus is used to connect I/O extensions to the main controller.

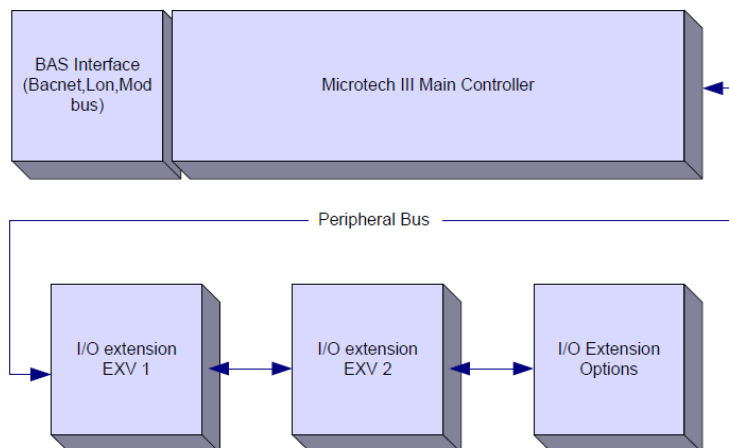



**CAUTION:** Maintain the correct polarity when connecting the power supply to the boards, otherwise the peripheral bus communication will not operate and the boards may be damaged.


## 2.5 Communication Modules

Any of the following modules can be connected directly to the left side of the main controller to allow a BAS or other remote interface to function. Up to three can be connected to the controller at a time. The controller should automatically detect and configure itself for new modules after booting up. Removing modules from the unit will require manually changing the configuration.

Module	Siemens Part Number	Usage
BacNet/IP	POL908.00/MCQ	Optional
Lon	POL906.00/MCQ	Optional
Modbus	POL902.00/MCQ	Optional
BACnet/MSTP	POL904.00/MCQ	Optional

## 3 USING THE CONTROLLER

The standard HMI consists of an inbuilt display (A) with 3 buttons (B) and a push'n'roll control (C).

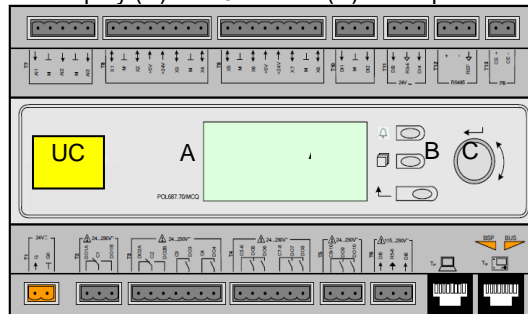

The keypad/display (A) consists of a 5-line by 22 character display. The function of the three buttons (B) is described below:

- Alarm status (from any page it links with the page with alarm list, alarm log and alarm snapshot if available)
- Back to Main Page
- Back to the previous level (it can be the Main Page)

The push'n'roll command (C) is used to scroll between the different menu pages, settings and data available on the HMI for the active password level. Rotating the wheel allows to navigate between lines on a screen (page) and to increase and decrease changeable values when editing. Pushing the wheel acts as an Enter Button and will jump from a link to the next set of parameters.

### 3.1 Navigating

When power is applied to the control circuit, the controller screen will be active and display the Home screen, which can also be accessed by pressing the Menu Button.

An example of the HMI screens is shown in the following picture.

M a i n M e n u	1 / 11
E n t e r P a s s w o r d	▶
U n i t S t a t u s =	
O f f : U n i t S W	
A c t i v e S e t p t =	7 . 0 ° C

A bell ringing in the top right corner will indicate an active alarm. If the bell doesn't move it means that the alarm has been acknowledged but not cleared because the alarm condition hasn't been removed. A LED will also indicate where the alarm is located between the unit or circuits.

M a i n M e n u	1 /
E n t e r P a s s w o r d	▶
U n i t S t a t u s =	
O f f : U n i t S W	
A c t i v e S e t p t =	7 . 0 ° C

The active item is highlighted in contrast, in this example the item highlighted in Main Menu is a link to another page. By pressing the push'n'roll, the HMI will jump to a different page. In this case the HMI will jump to the Enter Password page.

E n t e r P a s s w o r d	2 / 2
E n t e r P W	* * * *

### 3.2 Passwords

The HMI structure is based on access levels that means that each password will disclose all the settings and parameters allowed to that password level. Basic informations about the status can be accessed without the need to enter the password. The user UC handles two level of passwords:

The following information will cover all data and settings accessible with the maintenance password.

In the Enter Password screen, the line with the password field will be highlighted to indicate that the field on the right can be changed. This represents a setpoint for the controller. Pressing the push'n'roll the individual field will be highlighted to allow an easy introduction of the numeric password.

E n t e r   P a s s w o r d	2 / 2
E n t e r   P W	5 * * *

The password will time out after 10 minutes and is cancelled if a new password is entered or the control powers down. Entering an invalid password has the same effect as continuing without a password. It is changeable from 3 to 30 minutes via the Timer Settings menu in the Extended Menus.

### 3.3 Editing

The Editing Mode is entered by pressing the navigation wheel while the cursor is pointing to a line containing an editable field. Pressing the wheel again cause the new value to be saved and the keypad/display to leave the edit mode and return to the navigation mode.

### 3.4 Basic Control System Diagnostic

MicroTech IV controller, extension modules and communication modules are equipped with two status LED (BSP and BUS) to indicate the operational status of the devices. The BUS LED indicates the status of the communication with the controller. The meaning of the two status LED is indicated below.

#### Main Controller (UC)

BSP LED	Mode
Solid Green	Application running
Solid Yellow	Application loaded but not running (*) or BSP Upgrade mode active
Solid Red	Hardware Error (*)
Flashing Green	BSP startup phase. The controller needs time for starting.
Flashing Yellow	Application not loaded (*)
Flashing Yellow/Red	Fail safe mode (in case that the BSP upgrade was interrupted)
Flashing Red	BSP Error (software error*)
Flashing Red/Green	Application/BSP update or initialization

(\*) Contact Service.

#### Extension modules

BSP LED	Mode	BUS LED	Mode
Solid Green	BSP running	Solid Green	Communication running, I/O working
Solid Red	Hardware Error (*)	Solid Red	Communication down (*)
Flashing Red	BSP Error (*)	Solid Yellow	Communication running but parameter from the application wrong or missing, or uncorrect factory calibration
Flashing Red/Green	BSP upgrade mode		

#### Communication modules

##### BSP LED (same for all modules)

BSP LED	Mode
Solid Green	BPS running, communication with controller
Solid Yellow	BSP running, no communication with controller (*)
Solid Red	Hardware Error (*)
Flashing Red	BSP Error (*)
Flashing Red/Green	Application/BSP update

(\*) Contact Service.

##### BUS LED

BUS LED	LON	Bacnet MSTP	Bacnet IP	Modbus
Solid Green	Ready for Communication. (All Parameter loaded, Neuron configured). Doesn't indicate a communication with other devices.	Ready for Communication. The BACnet Server is started. It doesn't indicate an active communication	Ready for Communication. The BACnet Server is started. It doesn't indicate an active communication	All Communication running
Solid Yellow	Startup	Startup	Startup. The LED stays yellow until the module receives a IP Address, therefore a link must be established.	Startup, or one configured channel not communicating to the Master
Solid Red	No Communication to Neuron (internal error, could be solved by downloading a new LON application)	BACnet Server down. Automatically a restart after 3 seconds are initiated.	BACnet Server down. Automatic restart after 3 seconds is initiated.	All configured Communications down. Means no communication to the Master. The timeout can be configured. In case that the timeout is zero the timeout is disabled.

BUS LED	LON	Bacnet MSTP	Bacnet IP	Modbus
Flashing Yellow	Communication not possible to the Neuron. The Neuron must be configured and set online over the LON Tool.			

### 3.5 Controller maintenance

The controller requires to maintain the installed battery. Every two years it's required to replace the battery. Battery model is: BR2032 and it is produced by many different vendors.

To replace the battery remove the plastic cover of the controller display using a screw driver as shown in the following pictures:




Be careful to avoid damages to the plastic cover. The new battery shall be placed in the proper battery holder which is highlighted in the picture, respecting the polarities indicated into the holder itself.


### 3.6 Optional Remote User Interface

As an option an external Remote HMI can be connected on the UC. The Remote HMI offers the same features as the inbuilt display plus the alarm indication done with a light emitting diode located below the bell button.

All viewing and setpoint adjustments available on the unit controller are available on the remote panel. Navigation is identical to the unit controller as described in this manual.

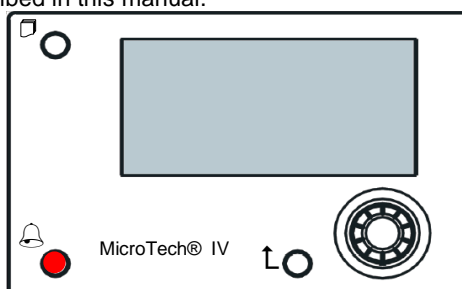

The Remote HMI can be extended up to 700m using the process bus connection available on the UC. With a daisy-chain connection as below, a single HMI can be connected to up to 8 units. Refer to the specific HMI manual for details.



### 3.7 Embedded Web Interface

The MicroTech IV controller has an embedded web interface that can be used to monitor the unit when connected to a local network. It is possible to configure the IP addressing of the MicroTech IV as a fixed IP or DHCP depending on the network configuration.


With a common web browser a PC can connect with the unit controller entering the IP address of the controller or the host name, both visible in the "About Chiller" page accessible without entering a password.

When connected, it will be required to enter a user name and a password. Enter the following credential to get access to the web interface:

User Name: ADMIN

Password: SBTAdmin!



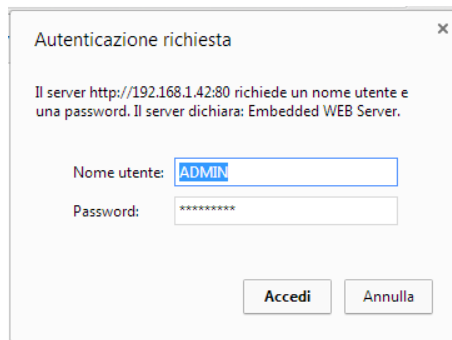



Autenticazione richiesta

Il server http://192.168.1.42:80 richiede un nome utente e una password. Il server dichiara: Embedded WEB Server.

Nome utente:

Password:

The Main Menu page will be displayed. The page is a copy of the onboard HMI and follows the same rules in terms of access levels and structure.

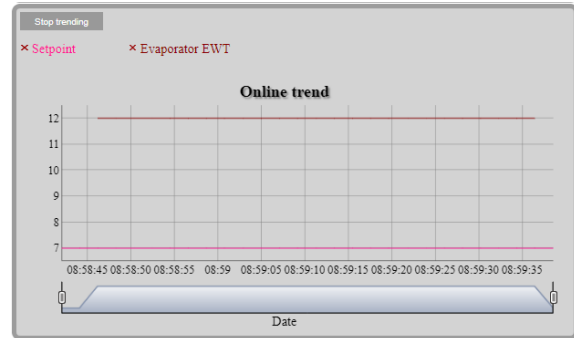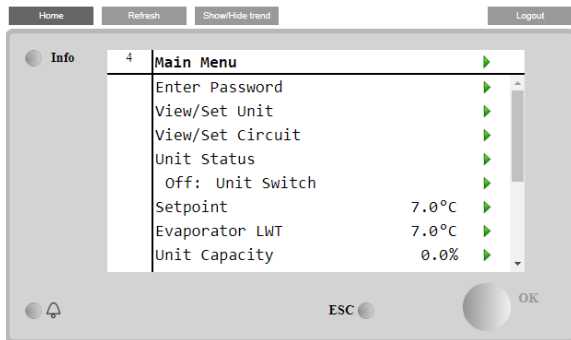

In addition it allows to trend log a maximum of 5 different quantities. It's required to click on the value of the quantity to monitor and the following additional screen will become visible:

Depending on the web browser and its version the trend log feature may not be visible. It's required a web browser supporting HTML 5 like for example:


- Microsoft Internet Explorer v.11,
- Google Chrome v.37,
- Mozilla Firefox v.32.

These software are only an example of the browser supported and the versions indicated have to be intended as minimum versions.

## 4 WORKING WITH THIS UNIT

### 4.1 Chiller On/Off

Starting from factory setup, unit On/Off can be managed by the user using the selector **Q0**, placed in the electrical panel, which can switch between three positions: **0 – Local – Remote**.



**0** Unit is disabled



**Loc (Local)** Unit is enabled to start the compressors



**Rem (Remote)** Unit On/Off is managed through the “Remote On/Off” physical contact.  
Closed contact means unit enabled.  
Opened contact means unit disabled.  
Refer to the electrical wiring diagram, Field Wiring Connection page, to find the references about Remote On/Off contact. Generally, this contact is used to bring out from the electrical panel the on/off selector

Some chiller models can be equipped with additional selectors **Q1 - Q2** used to enable or disabled specific refrigerant circuit.



**0** Circuit 1 is disabled.





**1** Circuit 1 is enabled.

Unit controller provides also additional software features to manage unit start/stop, that are set by default to allow unit start:

1. Keypad On/Off
2. Scheduler (Time programmed On/Off)
3. Network On/Off (optional with communication modules)

#### 4.1.1 Keypad On/Off

In the main page, scroll down until **Unit Enable** menu, where are available all settings to manage unit and circuits start/stop.

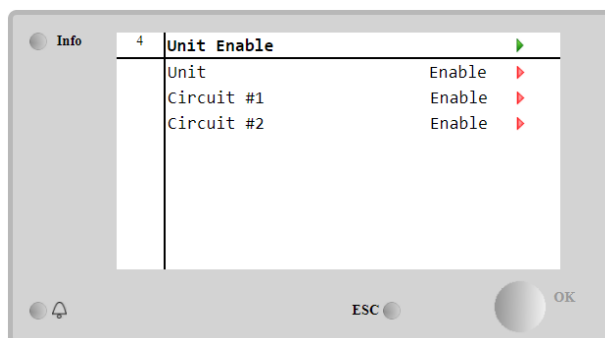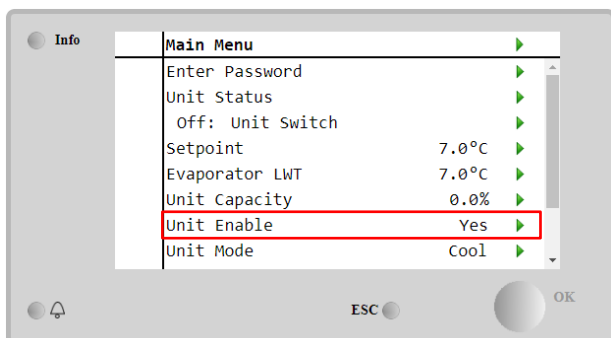

Parameter	Range	Description
Unit	Disable	Unit disabled
	Enable	Unit enabled

	Scheduler	Unit start/stop can be time programmed for each weekday
Circuit #X	Disable	Circuit #X disabled
	Enable	Circuit #X enabled
	Test	Circuit #X in test mode. This feature has to be used only from trained person or Daikin service

Unit menu with a dropdown menu showing 'Enable', 'Disable', 'Enable' (highlighted), and 'Scheduler'. Below the menu are 'Save' and 'Cancel' buttons.

Circuit #1 menu with a dropdown menu showing 'Enable', 'Disable', 'Enable' (highlighted), and 'Test'. Below the menu are 'Save' and 'Cancel' buttons.

#### 4.1.2 Scheduler and Silent mode functionalities

The Scheduler function can be used when is required an automatic chiller start/stop programming.

To use this function, follow below instructions:

1. Q0 selector = Local (refer to 4.1)
2. Unit Enable = Scheduler (refer to 4.1.1)
3. Controller date and time properly set (refer to 4.7)

Scheduler programming is available going in **Main Page → View/Set Unit → Scheduler** menu

Scheduler menu showing 'State' as 'Off'. Below are days of the week with their respective states: Monday (Passive), Tuesday (Passive), Wednesday (Active), Thursday (Passive), Friday (Passive), Saturday (Passive), Sunday (Passive). At the bottom are 'ESC' and 'OK' buttons.

Monday menu showing time bands: Time 1 (00:00), Value 1 (off), Time 2 (06:30), Value 2 (off), Time 3 (\*: \*), Value 3 (off), Time 4 (\*: \*), Value 4 (off). At the bottom are 'ESC' and 'OK' buttons.

For each weekday can be programmed up to six time bands with a specific operating mode. First operating mode starts at Time 1, ends at Time 2 when will start the second operating mode and so on until the latest.

Time 1 menu showing the time set to 00:00. Below are 'Save' and 'Cancel' buttons.

Value 1 menu showing the operating mode set to 'off'. The dropdown menu also shows 'On 1', 'On 2', 'On 1 - Silent', and 'On 2 - Silent'. Below are 'Save' and 'Cancel' buttons.

Depending on unit type, different operating modes are available:

Parameter	Range	Description
Value 1	Off	Unit disabled
	On 1	Unit enabled – Water setpoint 1 selected
	On 2	Unit enabled – Water setpoint 2 selected
	On 1 - Silent	Unit enabled – Water setpoint 1 selected – Fan silent mode enabled
	On 2 - Silent	Unit enabled – Water setpoint 2 selected – Fan silent mode enabled

When the **Fan Silent Mode** function is enabled the chiller noise level is reduced decreasing the maximum speed allowed for fans. Following table reports how much maximum speed is decreased for the different unit types.

Unit noise class	Normal maximum fan speed [rpm]	Silent mode maximum fan speed [rpm]
Standard	900	700
Low	900	700
Reduced	700	500



All data reported in the table, will be respected only if the chiller is operating within its operating limits.

The **Fan Silent Mode** function can be enabled only for units equipped with VFD fans.



#### 4.1.3 Network On/Off

Chiller On/Off can be managed also with serial protocol, if the unit controller is equipped with one or more communication modules (BACNet, Modbus or LON). In order to control the unit over the network, follow below instructions:

1. Q0 selector = Local (refer to 4.1)
2. Unit Enable = Enable (refer to 4.1.1)
3. Control Source = Network (refer to 4.5)
4. Close the contact Local/Network Switch (refer to 4.5), when required!

## 4.2 Water Setpoints

Purpose of this unit is to cool or to heat (in case of heat pump) the water temperature, to the setpoint value defined by the user and displayed in the main page:

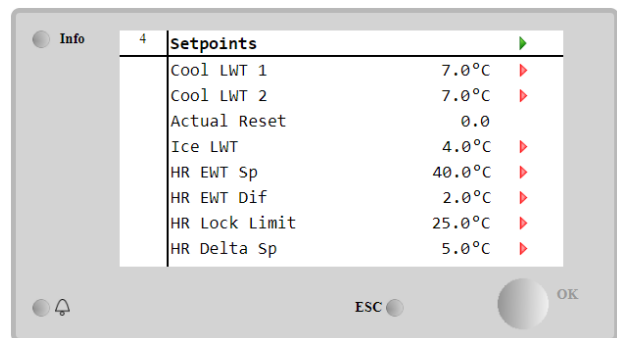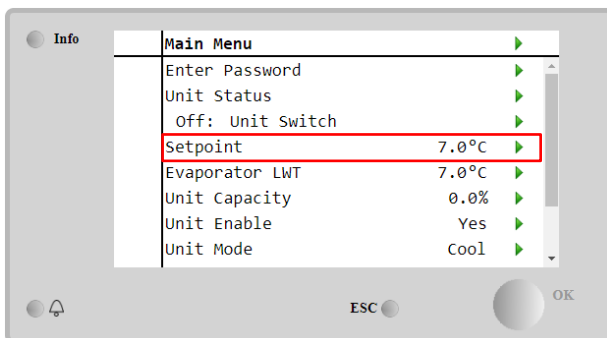

The unit can work with a primary or a secondary setpoint, that can be managed as indicated below:

1. Keypad selection + Double Setpoint digital contact
2. Keypad selection + Scheduler Configuration
3. Network
4. Setpoint Reset function

As first step the primary and secondary setpoints need to be defined. From main menu, with user password, press on **Setpoint**.

Parameter	Range	Description
Cool LWT 1	Ranges of the Cool, Heat, Ice setpoint are reported in the IOM of every specific unit.	Primary cooling setpoint.
Cool LWT 2		Secondary cooling setpoint.
Actual Reset		This item is visible only when the Setpoint Reset function is enabled and it shows the actual reset applied to the basic setpoint
Heat LWT 1		Primary heating setpoint.
Heat LWT 2		Secondary heating setpoint.
Ice LWT		Setpoint for Ice mode.

The change between primary and secondary setpoint can be performed using the **Double setpoint** contact, always available in the user terminal box, or through the **Scheduler** function.

Double setpoint contact works as below:

- Contact opened, the primary setpoint is selected
- Contact closed, the secondary setpoint is selected

In order to change between primary and secondary setpoint with the Scheduler, refer to the section 4.1.2.



When the scheduler function is enabled, the Double setpoint contact is ignored





When the operating mode Cool/Ice w/Glycol is selected, the Double Setpoint contact will be used to switch between the Cool and Ice mode, producing no change on the active setpoint

To modify the active setpoint through network connection, refer to Network control section 4.5.

The active setpoint can further modified using the Setpoint Reset function as explained in the section 4.10.2.

### 4.3 Unit Mode

The **Unit Mode** is used to define if the chiller is working to produce chilled or heated water. Current mode is reported in the main page to the item **Unit Mode**.

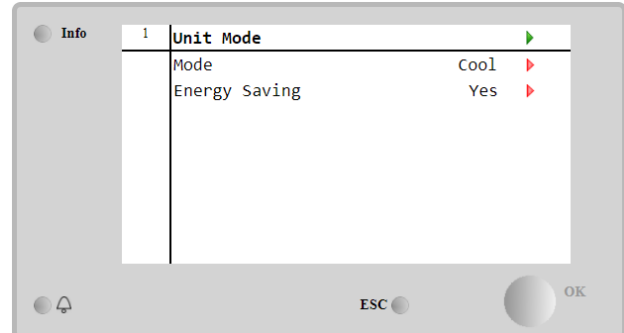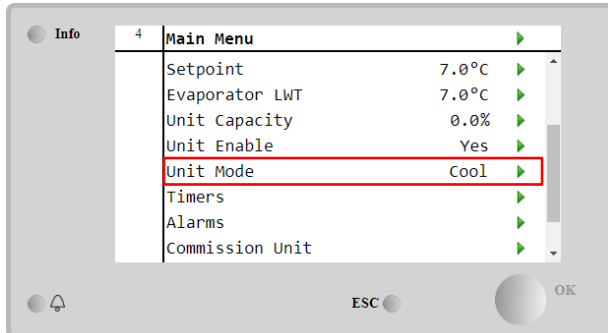

Depending on the unit type, different operating modes can be selected entering, with maintenance password, in the **Unit Mode** menu. In the table below are listed and explained all modes.

Parameter	Range	Description	Unit Range
Mode	Cool	Set if chilled water temperature up to 4°C is required. No glycol is generally needed in the water circuit, unless ambient temperature may reach low values.	A/C and W/C
	Cool w/Glycol	Set if chilled water temperature below 4°C is required. This operation requires proper glycol/water mixture in the evaporator water circuit.	A/C and W/C
	Cool/Ice w/Glycol	Set in case a dual cool/ice mode is required. The switch between the two modes is performed using the contact physical Double Setpoint. Double Setpoint opened: the chiller will work in cooling mode with the Cool LWT being as the Active Setpoint. Double Setpoint closed: The chiller will work in Ice mode with the Ice LWT as the Active Setpoint.	A/C and W/C
	Ice w/Glycol	Set if Ice storage is required. The application requires the compressors to operate at full load until the ice bank is completed, and then to stop for at least 12 hours. In this mode the compressor(s) will not operate at part load, but will work only in on/off mode.	A/C and W/C
	<b><i>The following modes allow to switch the unit between heat mode and one of the previous cool mode (Cool, Cool w/Glycol, Ice)</i></b>		
	Heat/Cool	Set in case a dual cool/heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box <ul style="list-style-type: none"> <li>Switch COOL: The chiller will work in cooling mode with the Cool LWT as the Active Setpoint.</li> <li>Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint.</li> </ul>	W/C
	Heat/Cool w/Glycol	Set in case a dual cool/heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box <ul style="list-style-type: none"> <li>Switch COOL: The chiller will work in cooling mode with the Cool LWT as the Active Setpoint.</li> <li>Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint</li> </ul>	W/C
	Heat/Ice w/Glycol	Set in case a dual Ice/Heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box <ul style="list-style-type: none"> <li>Switch ICE: The chiller will work in cooling mode with the Ice LWT as the Active Setpoint.</li> <li>Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint.</li> </ul>	W/C
	Pursuit	Set in case of double water control cool and contemporary heat. Evaporator leaving water temperature follows the Cool LWT setpoint. Condenser leaving water temperature follows the Heat LWT setpoint.	W/C
	Test	Enables the Manual Control of the unit. The manual test feature helps in debugging and checking the operational status of actuators. This feature is accessible only with the maintenance password in the main menu. To activate the test feature is required to disable the Unit from the Q0 switch and change the available mode to Test.	A/C and W/C
Energy Saving	No, Yes	Disable/Enable of the energy saving function	

Like the On/Off and setpoint control, also the unit mode can be modified from network. Refer to Network control section 4.5 for more details.

#### 4.3.1 Heat/Cool Switch

Starting from factory setup, Heat mode switch can be managed by the user using the selector **QHP**, placed in the electrical panel, which can switch between three positions: **0 – 1**.



0

Heat mode disabled



1

Heat mode enabled



In order to enable the Heat mode, the Unit mode must be set in “Heat/Cool” mode, and the QHP switch must be set in 1 position.

#### 4.3.2 Energy Saving mode

Some unit types provide the possibility to enable an energy saving function, that reduces the power consumption deactivating the compressors crankcase heater, when the chiller is Disabled.

This mode implies that the time needed to start the compressors, after an Off period, could be delayed until a maximum of 90 minutes.

For time critical application, the energy saving function can be disabled by the user to ensure the compressor start within 1 minute from unit On command.

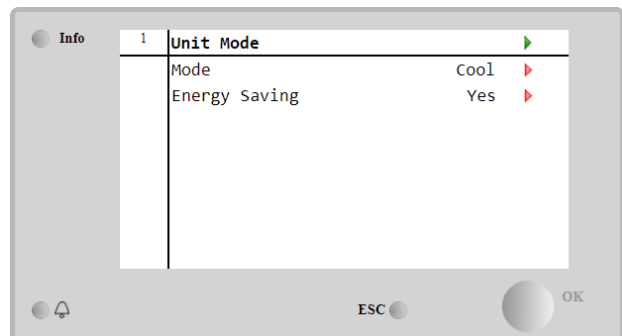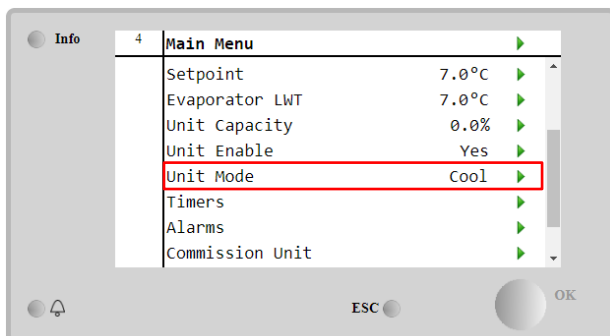

#### 4.4 Unit Status

Unit controller provides in the main page some information about chiller status. All chiller states are listed and explained below:

Parameter	Overall status	Specific status	Description
Unit Status	Auto:		Unit is in Auto control. The pump is running and at least one compressor is running.
		Wait For Load	Unit is in standby because the thermostatic control satisfies the active setpoint.
		Water Recirc	Water pump is running in order to equalize the water temperature in the evaporator.
		Wait For Flow	Unit pump is running but the flow signal still indicates a lack of flow through the evaporator.
		Max Pulldown	Unit thermostatic control is limiting the unit capacity as the water temperature is dropping too quickly.
		Capacity Limit	Demand limit has been hit. Unit capacity will not further increase.
		Current Limit	Maximum current has been hit. Unit capacity will not further increase.
		Silent Mode	Unit is running and Silent Mode is enabled
	Off:	Master Disable	Unit is disabled by the Master Slave function
		Ice Mode Timer	This status can be shown only if the unit can work in Ice Mode. The unit is off because the Ice setpoint has been satisfied. Unit will remain off until the Ice Timer has expired.



		OAT Lockout	The unit cannot run because the Outside Air Temperature is below the limit foreseen for the condenser temperature control system installed in this Unit. If the Unit has to run anyway, check with your local maintenance how to proceed.
		Circuits Disabled	No circuit is available to run. All circuits can be disabled by their individual enable switch or can be disabled by a component safety condition active or can be disabled by keypad or can be all in alarms. Check the individual circuit status for further details.
		Unit Alarm	A unit alarm is active. Check the alarm list to see what is the active alarm inhibiting the unit to start and check if the alarm can be cleared. Refer to section 5. before proceeding.
		Keypad Disable	The Unit has been disabled by keypad. Check with your local maintenance if it can be enabled.
		Network Disabled	Unit is disabled by Network.
		Unit Switch	The Q0 selector is set to 0 or the Remote On/Off contact is opened.
		Test	Unit mode set to Test. This mode is activated to check operability of onboard actuators and sensors. Check with the local maintenance if the Mode can be reverted to the one compatible with unit application (View/Set Unit – Set-Up – Available Modes).
		Scheduler Disable	Unit is disabled by Scheduler programming
	Pumpdown		Unit is performing the pumpdown procedure and it will stop within few minutes

## 4.5 Network Control

When the unit controller is equipped with one or more communication modules the **Network Control** feature can be enabled, which gives the possibility to control the unit via serial protocol (Modbus, BACNet or LON).

To allow unit's control from network, follow below instructions:

1. Close the physical contact "Local/Network Switch". Refer to unit electrical wiring diagram, Field Wiring Connection page, to find the references about this contact.
2. Go to **Main Page → View/Set Unit → Network Control**  
Set **Controls Source = Network**

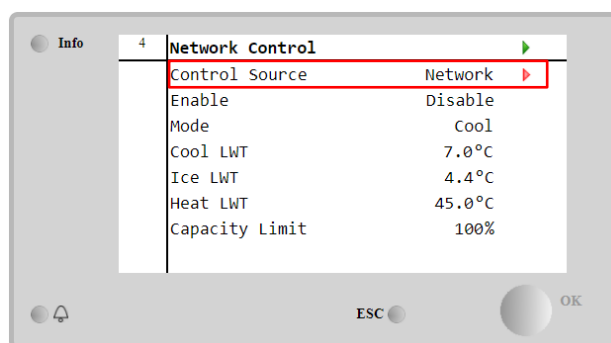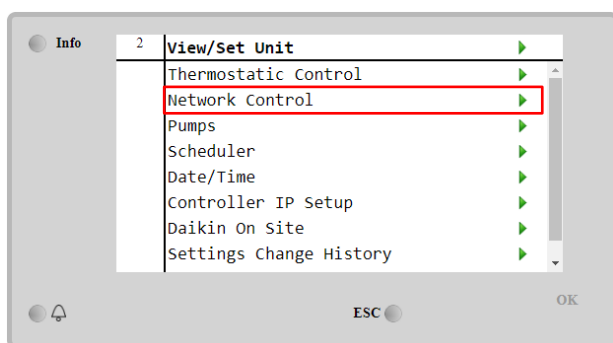

**Network Control** menu returns all main values received from serial protocol.

Parameter	Range	Description
Control Source	Local	Network control disabled
	Network	Network control enabled
Enable	-	On/Off command from network
Mode	-	Operating mode from network
Cool LWT	-	Cooling water temperature setpoint from network
Ice LWT	-	Ice water temperature setpoint from network
Heat LWT	-	Heating water temperature setpoint from network
FreeCooling	Enable/Disable	On/Off command from network
Capacity Limit	-	Capacity limitation from network

Refer to communication protocol documentation for specific registers addresses and the related read/write access level.


## 4.6 Thermostatic Control

Thermostatic control settings, allows to set up the response to temperature variations. Default settings are valid for most application, however plant specific conditions may require adjustments in order to have a smooth control or a quicker response of the unit.



The control will start the first compressor if the controlled temperature is higher (Cool Mode) or lower (Heat Mode) than the active setpoint of at least a Start Up DT value, whereas other compressors are started, step by step, if the controlled temperature is higher (Cool Mode) or lower (Heat Mode) than the active setpoint (AS) of at least a Stage Up DT (SU) value. Compressors stop if performed following same procedure looking to the parameters Stage Down DT and Shut Down DT.

	Cool Mode	Heat Mode
First compressor start	Controlled Temperature > Setpoint + Start Up DT	Controlled Temperature < Setpoint - Start Up DT
Other compressors start	Controlled Temperature > Setpoint + Stage Up DT	Controlled Temperature < Setpoint - Stage Up DT
Last compressor stop	Controlled Temperature < Setpoint - Shut Dn DT	Controlled Temperature > Setpoint - Shut Dn DT
Other compressors stop	Controlled Temperature < Setpoint - Stage Dn DT	Controlled Temperature > Setpoint - Stage Dn DT

A qualitative example of compressors start-up sequence in cool mode operation is shown in the graph below.

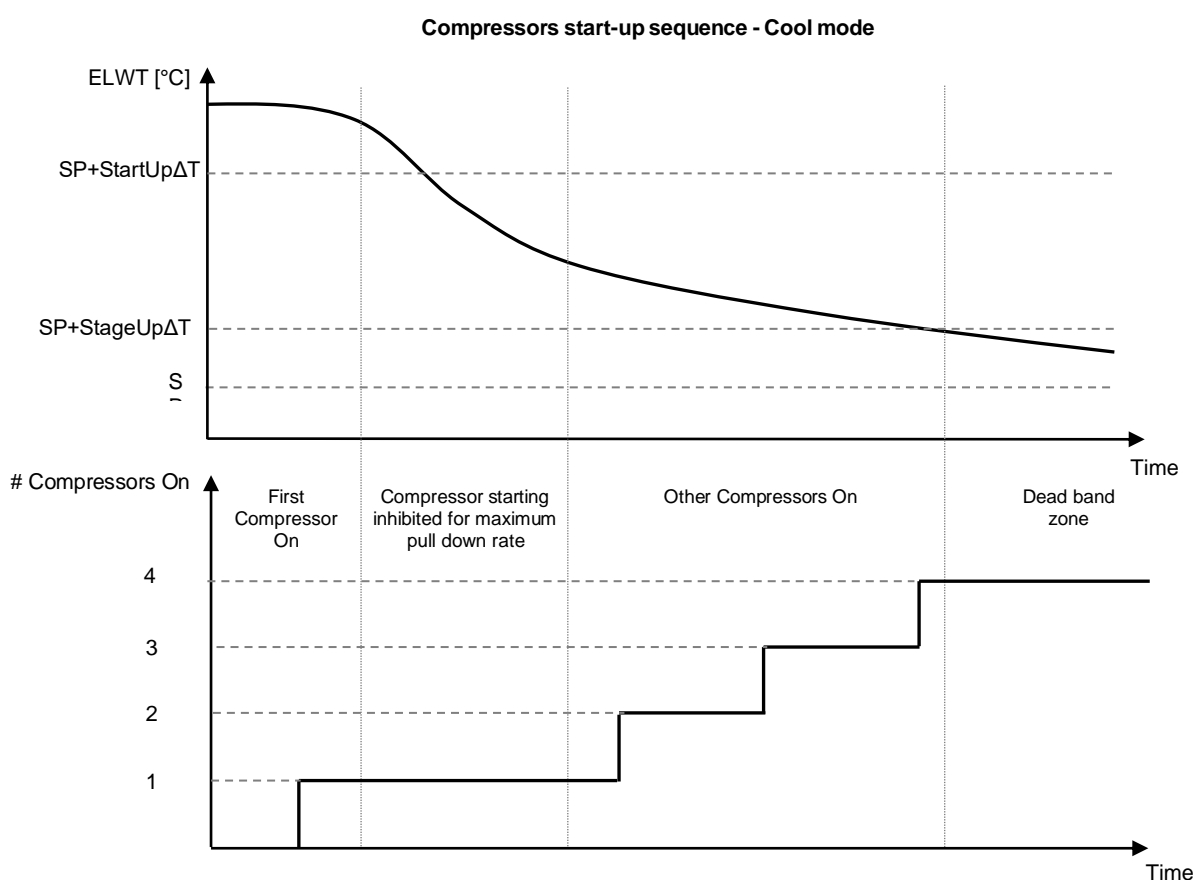

Thermostatic control settings are accessible from **Main Page**→**Thermostatic Control**

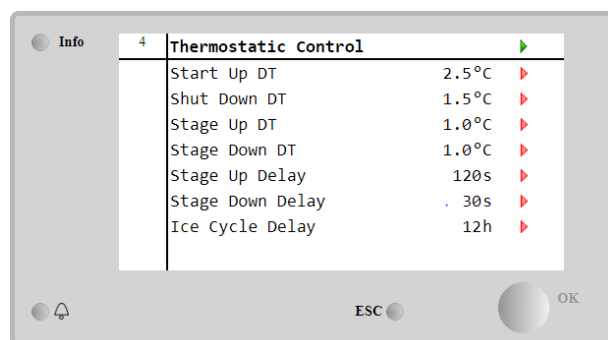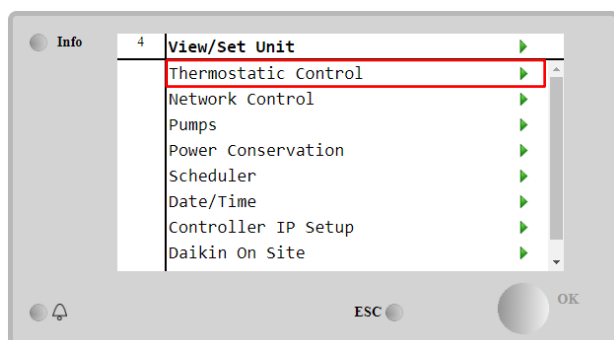

Parameter	Range	Description
-----------	-------	-------------





Start Up DT		Delta temperature respect the active setpoint to start the unit (startup of first compressor)
Shut Down DT		Delta temperature respect the active setpoint to stop the unit (shutdown of latest compressor)
Stage Up DT		Delta temperature respect the active setpoint to start a compressor
Stage Down DT		Delta temperature respect the active setpoint to stop a compressor
Stage Up Delay		Minimum time between the compressors startup
Stage Down Delay		Minimum time between the compressors shutdown
Ice Cycle Delay		Unit standby period during Ice mode operation

#### 4.7 Date/Time

The unit controller is able to take stored the actual date and time, that are used for:

1. Scheduler
2. Cycling of standby chiller with Master Slave configuration
3. Alarms Log

Date and time can be modified going in **View/Set Unit → Date/Time**

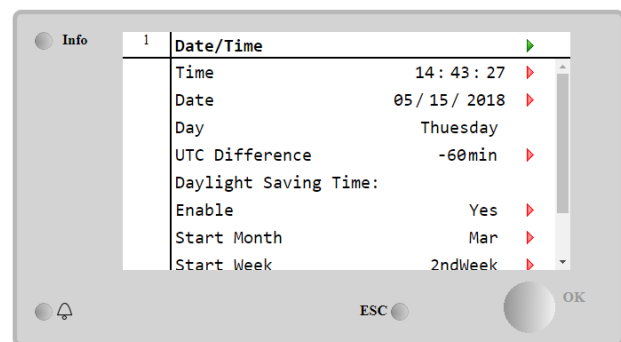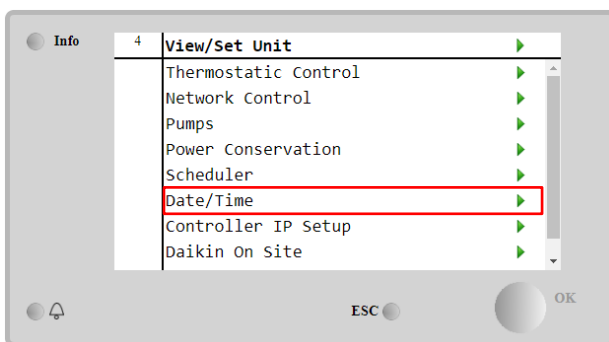



Parameter	Range	Description
Time		Actual date. Press to modify. Format is hh:mm:ss
Date		Actual time. Press to modify. Format is mm/dd/yy
Day		Returns the day of the week.
UTC Difference		Coordinated universal time.
Daylight Saving Time:		
Enable	No, Yes	It is used to enable/disable the automatic switch of the Daylight Saving Time
Start Month	NA, Jan...Dec	DayLight Saving time start month
Start Week	1 <sup>st</sup> ...5 <sup>th</sup> week	DayLight Saving time start week
End Month	NA, Jan...Dec	DayLight Saving time end month
End Week	1 <sup>st</sup> ...5 <sup>th</sup> week	DayLight Saving time end week



Remember to check periodically the controller battery in order to maintain updated date and time even when there is no electrical power. Refer to controller maintenance section

#### 4.8 Pumps

The UC can manage one or two water pumps for both evaporator and, for W/C units, condenser. Number of pumps and their priority can be set from **Main Page → View/Set Unit → Pumps**.

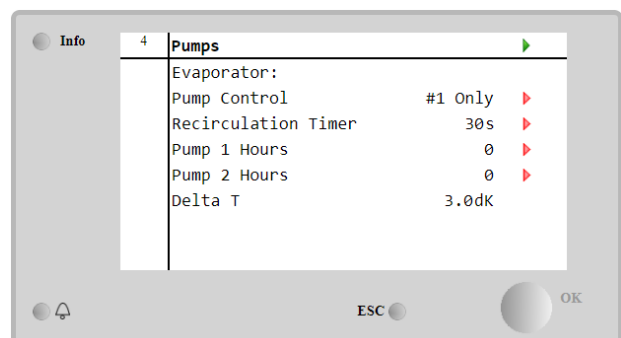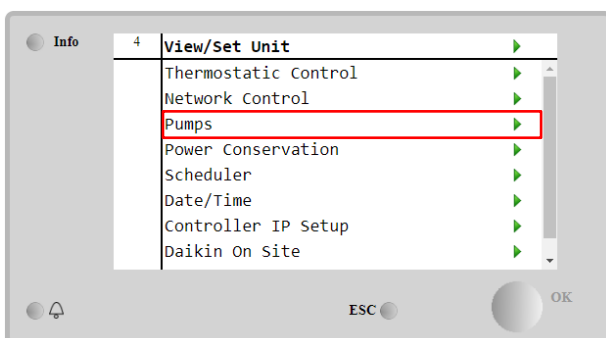

Parameter	Range	Description
-----------	-------	-------------



Pump Control	#1 Only	Set to this in case of single pump or twin pump with only #1 operational (f.e. in case of maintenance on #2)
	#2 Only	Set to this in case of twin pump with only #2 operational (f.e. in case of maintenance on #1)
	Auto	Set for automatic pump start management. At each chiller start, the pump with the least number of hours will be
	#1 Primary	Set to this in case of twin pump with #1 running and #2 as a backup
	#2 Primary	Set to this in case of twin pump with #2 running and #1 as a backup
Recirculation Timer		Minimum time required within flow switch has to in order to allow unit startup
Pump 1 Hours		Pump 1 running hours
Pump 2 Hours		Pump 2 running hours

## 4.9 External Alarm

The External Alarm is a digital contact that can be used to communicate to the UC an abnormal condition, coming from an external device connected to the unit. This contact is located in the customer terminal box and depending on the configuration can causes a simple event in the alarm log or also the unit stop. The alarm logic associated to the contact is the following:

Contact state	Alarm State	Note
Opened	Alarm	The alarm is generated if the contact remains opened for at least 5 seconds
Closed	No Alarm	The alarm is reset just the contact is closed

The configuration is performed from the **Commissioning → Configuration → Options** menu

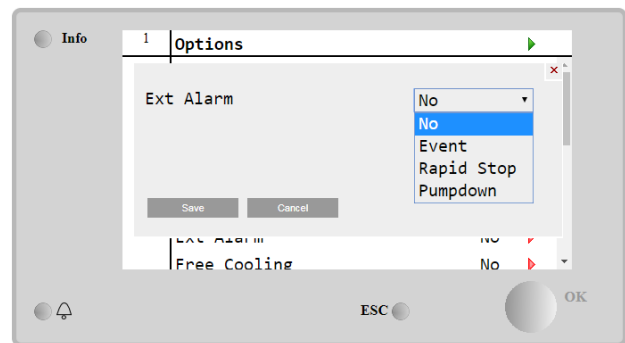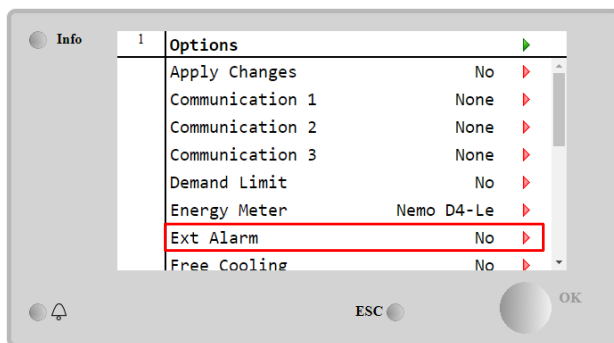

Parameter	Range	Description
Ext Alarm	Event	Event configuration generates an alarm in the controller but takes the unit running
	Rapid Stop	Rapid Stop configuration generates an alarm in the controller and performs a rapid stop of the unit
	Pumpdown	Pumpdown configuration generates an alarm in the controller and performs a pumpdown procedure to stop the unit.


## 4.10 Power Conservation

In this chapters will be explained the functions used to reduce the unit power consumption:

1. Demand Limit
2. Setpoint Reset

### 4.10.1 Demand Limit

The "Demand limit" function allows the unit to be limited to a specified maximum load. Capacity limit level is regulated using an external 4-20 mA signal with a linear relationship shown in the picture below. A signal of 4 mA indicates the maximum capacity available whereas a signal of 20 mA indicates the minimum capacity available. In order to enable this option, go to **Main Menu → Commission Unit → Configuration → Options** and set the **Demand Limit** parameter to Yes.

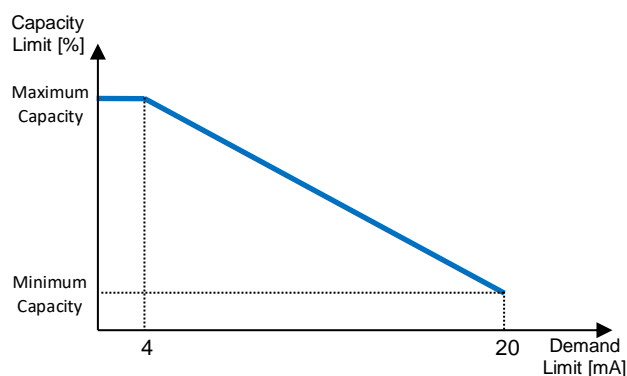


**Graph 1 Demand Limit[mA] vs Capacity Limit[%]**

It is worth pointing out that it is not possible to shut down the unit using the demand limit function, but only to unload it to its minimum capacity.

Note that this function does a real capacity limitation only if the unit is equipped with Screw compressors. In case of Scroll compressors, the demand limit operates a discretization of the overall unit capacity according to the actual number of compressors, and, depending on the external signal value, it enables only a subset of the total number of compressors, as shown in table below:

Number of Compressor	Demand Limit Signal [mA]	Maximum number of compressors On
4	$4 < < 8$	4
	$8 < < 12$	3
	$12 < < 16$	2
	$16 < < 20$	1
5	$4 < < 7.2$	5
	$7.2 < < 10.4$	4
	$10.4 < < 13.6$	3
	$13.6 < < 16.8$	2
	$16.8 < < 20.0$	1
6	$4 < < 6.7$	6
	$6.7 < < 9.3$	5
	$9.3 < < 12$	4
	$12 < < 14.7$	3
	$14.7 < < 17.3$	2
	$17.3 < < 20$	1

All info about this function are reported in the **Main Menu → Commission Unit → Configuration → Options → Demand Limit** page.


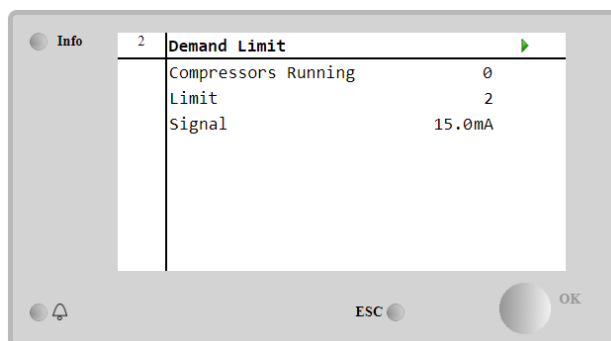


#### 4.10.2 Setpoint Reset

The “Setpoint Reset” function is able to override the chilled water temperature active setpoint when certain circumstances occur. The aim of this function is to reduce the unit energy consumption whilst maintaining the same comfort level. To this purpose, three different control strategies are available:

- Setpoint Reset by Outside Air Temperature (OAT)
- Setpoint Reset by an external signal (4-20mA)
- Setpoint Reset by Evaporator  $\Delta T$  (EWT)

In order to set the desired setpoint-reset strategy, go to **Main Menu → Commission Unit → Configuration → Options** and modify the **Setpoint Reset** parameter, according to the following table:

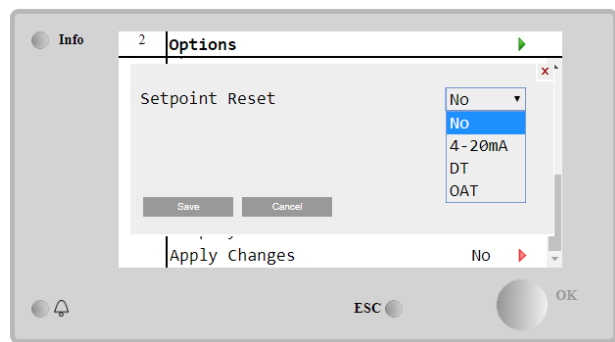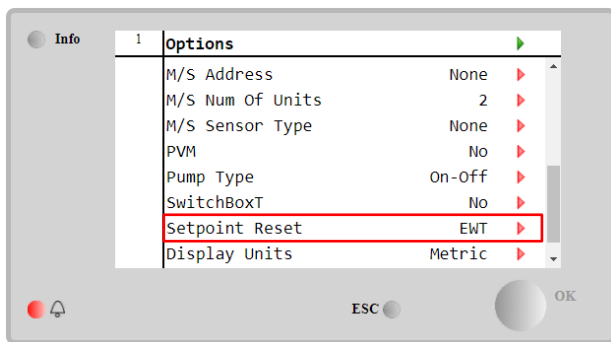


Parameter	Range	Description
LWT Reset	No	Setpoint reset not enabled
	4-20mA	Setpoint reset enabled by an external signal between 4 and 20mA
	DT	Setpoint reset enabled by Evaporator Water Temperature
	OAT	Setpoint reset enabled by Outside Air Temperature

Each strategy needs to be configured (although a default configuration is available) and its parameters can be set navigating to **Main Menu → View/Set Unit → Power Conservation → Setpoint Reset**.

Note that the parameters corresponding to a specific strategy will be available only once the Setpoint Reset has been set to a specific value and the UC has been restarted.


#### 4.10.2.1 Setpoint Reset by OAT (A/C units only)

When the **OAT** is selected as **Setpoint Reset** option, the LWT active setpoint(AS) is calculated applying a correction to the basic setpoint that depends on the ambient temperature (OAT) and on the current Unit Mode (Heating mode or Cooling mode). Several parameters can be configured, and they are accessible from the **Setpoint Reset** menu, as shown below:

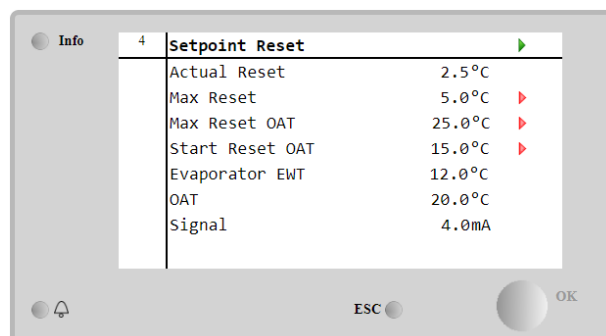

Parameter	Default	Range	Description
Actual Reset			Actual Reset shows which is the correction that will applied to the base setpoint
Max Reset (MR)	5.0°C	0.0°C÷10.0°C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the OAT option can cause on the LWT.
Max Reset OAT (MROAT)	15.5°C	10.0°C÷29.4°C	It represents the "threshold temperature" that correspond to the maximum setpoint variation.
Start Reset OAT(SROAT)	23.8°C	10.0°C÷29.4°C	It represents the "threshold temperature" of the OAT to activate the LWT setpoint reset, i.e. the LWT setpoint is overwritten only if the OAT reaches/overpasses the SROAT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset


Provided the unit is set in Cooling mode (Heating mode), the more the ambient temperature drops below (goes beyond) the SROAT, the more the LWT active setpoint (AS) is increased(decreased), until the OAT reaches the MROAT limit. When the OAT overpasses the MROAT, the active setpoint does not increase(decrease) anymore, and it remains stable to its maximum(minimum) value, i.e.  $AS = LWT + MR(-MR)$ .

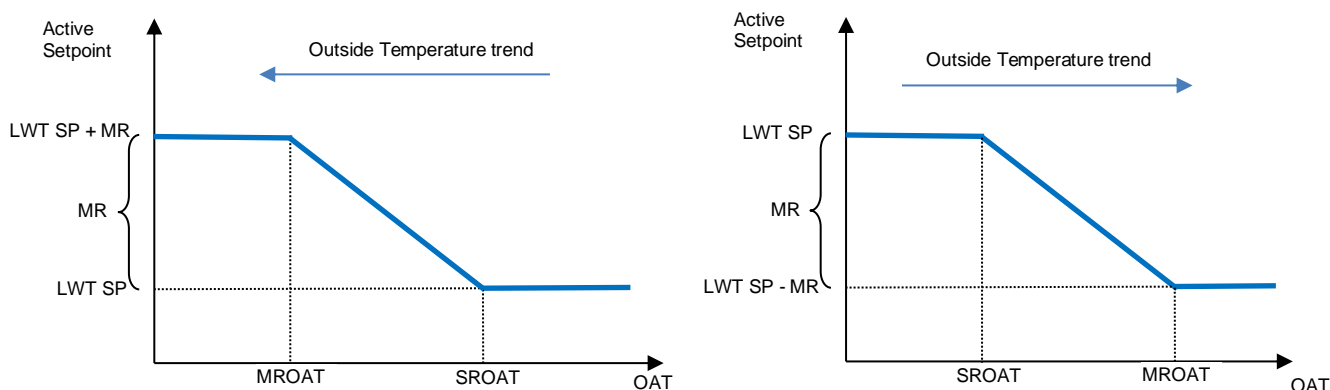


**Graph 2 Outside Ambient Temperature vs Active Setpoint - Cooling mode(left)/ Heating mode(right)**

#### 4.10.2.2 Setpoint Reset by External 4-20mA signal

When the **4-20mA** is selected as **Setpoint Reset** option, the LWT active setpoint(AS) is calculated applying a correction based on an external 4-20mA signal: 4 mA corresponds to 0°C correction, i.e. AS = LWT setpoint, whereas 20 mA corresponds to a correction of the Max Reset (MR) quantity, i.e. AS = LWT setpoint + MR(-MR) as shown in the following table:

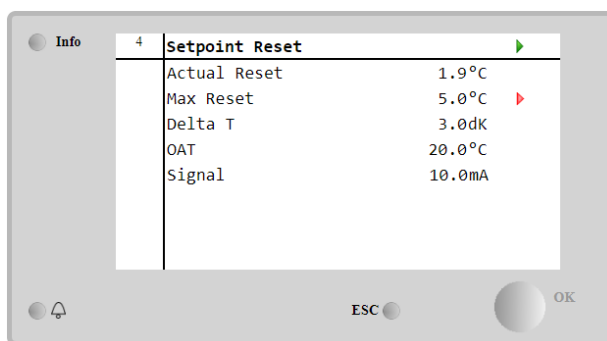

Parameter	Default	Range	Description
Actual Reset			Actual Reset shows which is the correction that will applied to the base setpoint
Max Reset (MR)	5.0°C	0.0°C ÷ 10.0°C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the 4-20mA option can cause on the LWT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset


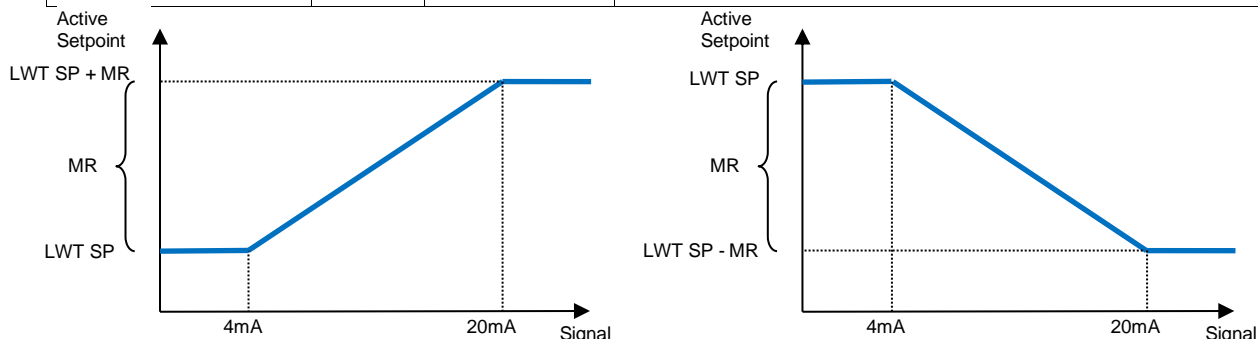


**Graph 3 External signal 4-20mA vs Active Setpoint - Cooling mode(left)/ Heating mode(right)**

#### 4.10.2.3 Setpoint Reset by DT

When the **DT** is selected as **Setpoint Reset** option, the LWT active setpoint(AS) is calculated applying a correction based on the temperature difference  $\Delta T$  between the leaving water temperature(LWT) and the evaporator entering(returning) water temperature (EWT). When the  $|\Delta T|$  becomes smaller than the Start Reset  $\Delta T$  setpoint(SR $\Delta T$ ), the LWT active

setpoint is proportionally increased (if Cooling mode set) or decreased (if Heating mode is set) of a maximum value equal to the Max Reset(MR) parameter.

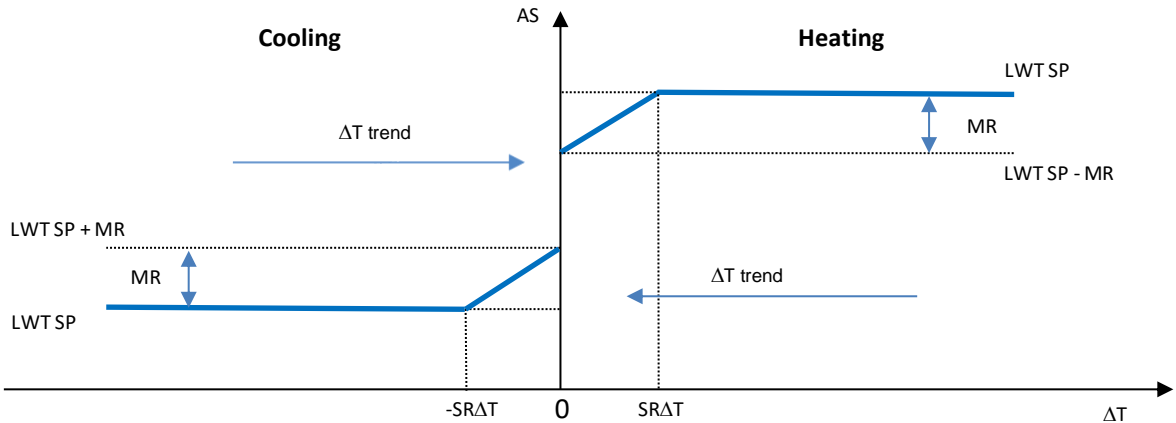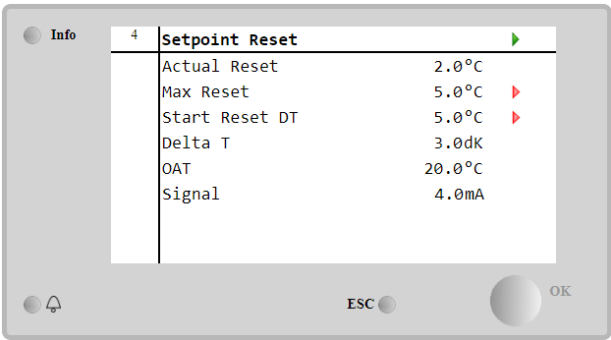



Graph 4 Evap ΔT vs Active Setpoint - Cooling mode(left)/ Heating mode(right)

Parameter	Default	Range	Description
Max Reset (MR)	5.0°C	0.0°C ÷ 10.0°C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the EWT option can cause on the LWT.
Max Reset (MR)	5.0°C	0.0°C ÷ 10.0°C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the DT option can cause on the LWT.
Start Reset DT (SRΔT)	5.0°C	0.0°C ÷ 10.0°C	It represents the “threshold temperature” of the DT to activate the LWT setpoint reset, i.e. the LWT setpoint is overwritten only if the DT reaches/overpasses the SRΔT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset



4.11 Electrical Data

Unit controller returns main electrical values read by the energy meter Nemo D4-L or Nemo D4-Le. All data are collected in the menu **Electrical Data**.

Main Page → View/Set Unit → Electrical Data

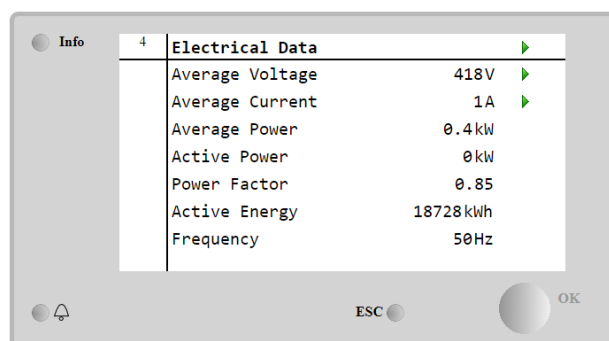
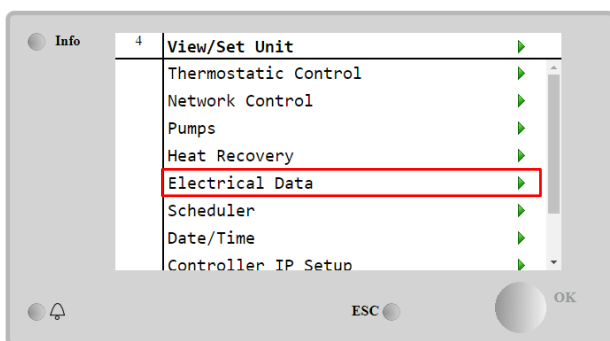


Parameter	Description
Average Voltage	Returns the average of the three chained voltages and links to the Voltage Data page
Average Current	Returns the current average and links to the Current Data page
Average Power	Returns the average power
Active Power	Returns the active power
Power Factor	Returns the power factor
Active Energy	Returns the active energy
Frequency	Returns the active frequency

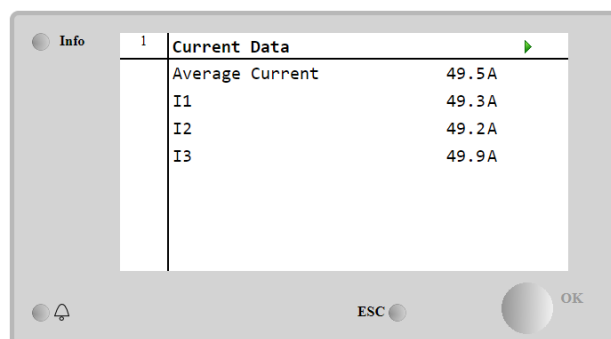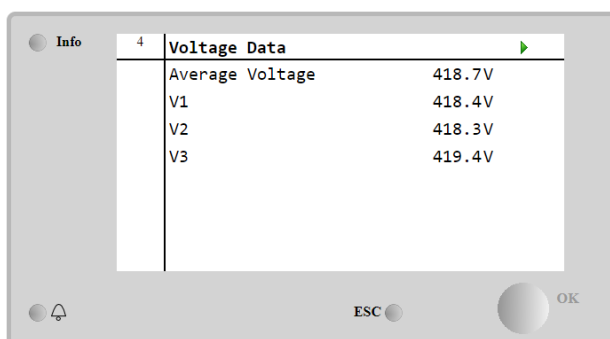

## 4.12 Controller IP Setup

The Controller IP Setup page is located at the path **Main Menu → View/Set Unit → Controller IP Setup**.

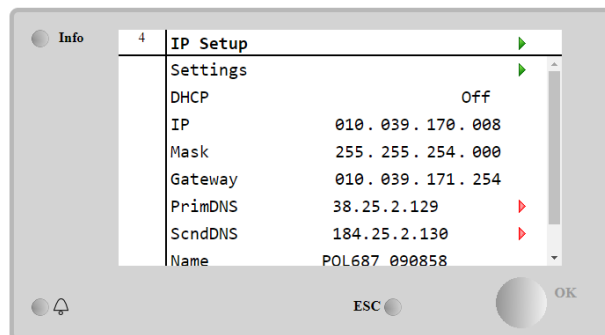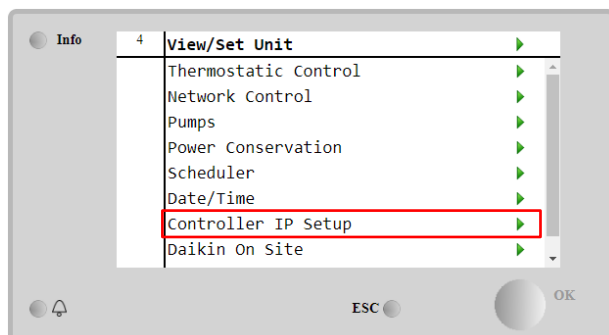

All of the information about current MTIII IP Network settings is reported in this page, as shown in the following table:

Parameter	Range	Description
DHCP	On	The DHCP option is enabled.
	Off	The DHCP option is disabled.
IP	xxx.xxx.xxx.xxx	The current IP address
Mask	xxx.xxx.xxx.xxx	The current Subnet Mask address.
Gateway	xxx.xxx.xxx.xxx	The current Gateway address.
PrimDNS	xxx.xxx.xxx.xxx	The current Primary DNS address.
ScndDNS	xxx.xxx.xxx.xxx	The current Secondary DNS address.
Device	POLxxx_xxxxxx	The Host Name of the MTIII controller.
MAC	xx-xx-xx-xx-xx-xx	The MAC address of the MTIII controller.

In order to modify the MTIII IP Network configuration, do the following operations:

- access the **Settings** menu
- set the DHCP option to Off

- modify the IP, Mask, Gateway, PrimDNS and ScndDNS addresses, if needed, taking care of the current network settings
- set **Apply changes** parameter to **Yes** to save the configuration and restart the MTIII controller.



The default internet configuration is:

Parameter	Default Value
IP	192.168.1.42
Mask	255.255.255.0
Gateway	192.168.1.1
PrimDNS	0.0.0.0
ScndDNS	0.0.0.0


Note that if the DHCP is set to On and the MTIII internet configurations shows the following parameter values

Parameter	Value
IP	169.254.252.246
Mask	255.255.0.0
Gateway	0.0.0.0
PrimDNS	0.0.0.0
ScndDNS	0.0.0.0

then an internet connection problem has occurred (probably due to a physical problem, like the Ethernet cable breaking).

#### 4.13 Daikin On Site

The Daikin on Site(DoS) page can be accessed navigating through **Main Menu → View/Set Unit → Daikin On Site**.

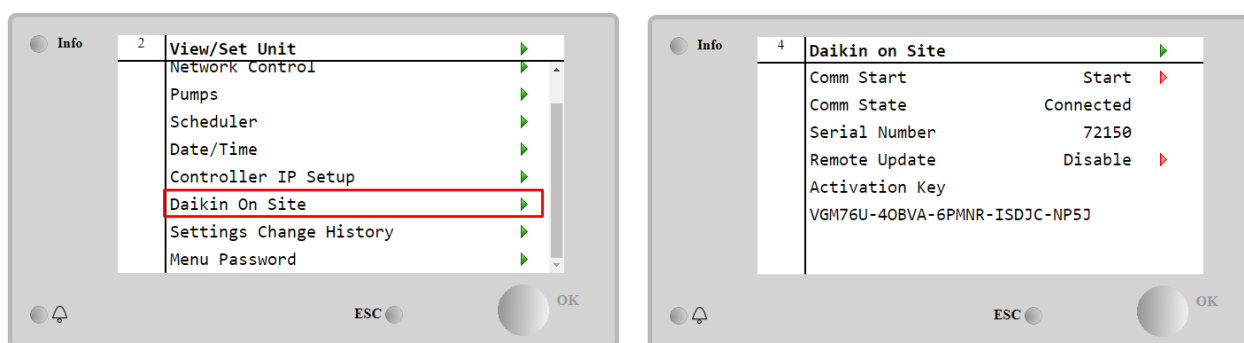

In order to use the DoS utility, the customer has to communicate the **Serial Number** to Daikin company and subscribe to the DoS service. Then, from this page, it is possible to:

- Start/Stop the DoS connectivity
- Check the connection status to DoS service
- Enable/Disable the remote update option

according to the parameters shown into the table below.

Parameter	Range	Description
Comm Start	Off	Stop the connection to DoS
	Start	Start the connection to DoS



Comm State	-	Connection to DoS is off
	IPErr	Connection to DoS cannot be established
	Connected	Connection to DoS is established and working
Remote Update	Enable	Enable the Remote update option
	Disable	Disable the Remote update option

Among all the services provided by DoS, the **Remote Update** option allows to remotely update the software currently running on the PLC controller, avoiding an in-situ intervention of maintenance personnel. To this purpose, just set the Remote Update parameter to **Enable**. Otherwise, keep the parameter set to **Disable**.



In the unlikely event of PLC replacement, the DoS connectivity can be switched from the old PLC to the new one just communicating the current **Activation Key** to Daikin company.

#### 4.14 Heat Recovery

The unit controller can handle a total or partial heat recovery option.

The heat recovery is enabled through the **Q8** switch installed in the electrical panel.

Some settings need to be properly set in order to match the specific plant requirements, going in **Main Page→View/Set Unit→Heat Recovery**

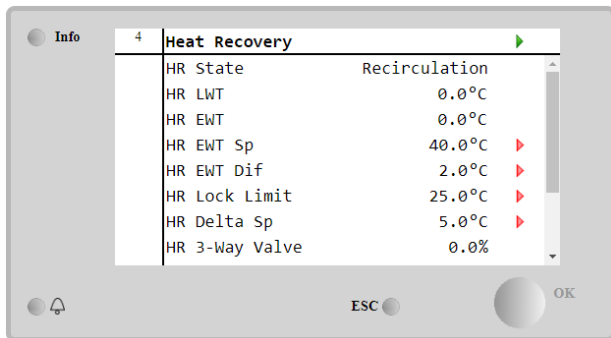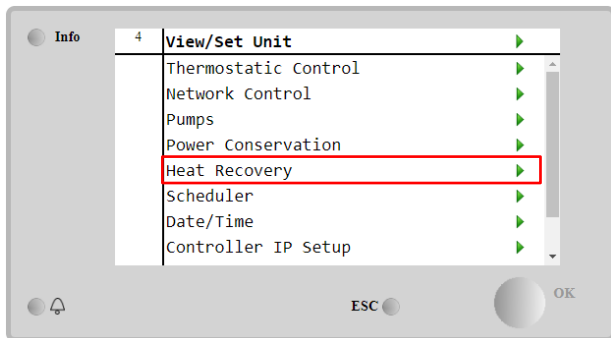

Parameter	Range	Description
HR State	Off	Heat recovery is disabled
	Recirculation	Heat recovery pump is running, but chiller fan is not regulating the heat recovery water temperature
	Regulation	Heat recovery pump is running and chiller fans are regulating the heat recovery water temperature
HR LWT		Heat recovery leaving water temperature
HR EWT		Heat recovery entering water temperature
HR EWT Sp		Heat recovery entering water temperature setpoint value
HR EWT Dif		Heat recovery
HR Lock Limit		
HR Delta Sp		
HR 3-Way Valve		Heat recovery 3-way valve opening percentage
HR Pumps		Heat recovery pump state
HR Pump Hours		Heat recovery pump running hours
HR C1 Enable		Heat recovery enable on circuit 1
HR C2 Enable		Heat recovery enable on circuit 2


#### 4.15 Rapid Restart

This chiller can activate a Rapid Restart (optional) sequence in reaction to a power failure. This option allows the unit to restore the load it had before the power failure in less time, reducing the standard cycle timer.

In order to Enable the Rapid Restart functionality, the customer must set to **Yes** the "Rapid Restart" parameter in the Rapid Restart page.

The feature is configured in the factory.

The 'Rapid Restart' page can be accessed navigating through **Main Menu → View/Set Unit → Rapid Restart**.

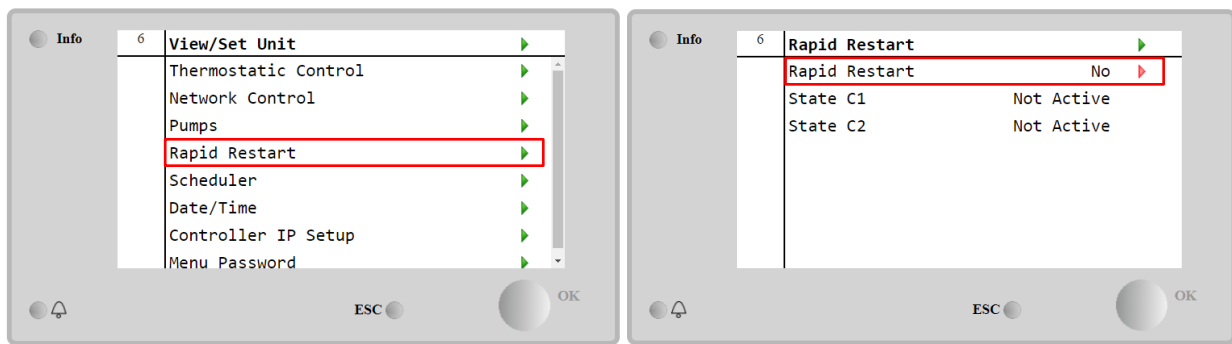

The “State C1/2” represents the actual state of the Rapid Restart procedure for each circuit.

Rapid restart is activated under the following conditions:

- The power failure exists for up to 180 seconds
- The unit and circuit switches are ON.
- No unit or circuit alarms exist.
- The unit has been running in the normal Run state
- The BMS Circuit Mode setpoint is set to Auto when the control source is Network
- The ELWT isn't lower than the “ELWT Setpoint + StgUpDT”
- The ELWT is greater than the “ELWT Setpoint + NomEvapDT\*Par\_RpdRst”, where Par\_RpdRst is a parameter that can be modified.

If the power failure is more than 180 seconds, the unit will start based on the standard cycle timer without Rapid Restart. After the power restart, the timers that are used during the Rapid Restart procedure are:

Parameter	Timer
Pump On	14s
1 <sup>st</sup> Compr On	30s
Full Load (6 Compr)	180s

## 5 ALARMS AND TROUBLESHOOTING

The UC protects the unit and the components from operating in abnormal conditions. Protections can be divided in preventions and alarms. Alarms can then be divided in pump-down and rapid stop alarms. Pump-down alarms are activated when the system or sub-system can perform a normal shutdown in spite of the abnormal running conditions. Rapid stop alarms are activated when the abnormal running conditions require an immediate stop of the whole system or sub-system to prevent potential damages.

The UC displays the active alarms in a dedicated page and keep an history of the last 50 entries divided between alarms and acknowledges occurred. Time and date for each alarm event and of each alarm acknowledge are stored.

The UC also stores alarm snapshot of each alarm occurred. Each item contains a snapshot of the running conditions right before the alarm has occurred. Different sets of snapshots are programmed corresponding to unit alarms and circuit alarms holding different information to help the failure diagnosis.

In the following sections it will also be indicated how each alarm can be cleared between local HMI, Network (by any of the high-level interfaces Modbus, Bacnet or Lon) or if the specific alarm will clear automatically.

### 5.1 Unit Alerts

All events reported in this section does not produce a unit stop, but only a visual information and an item in the alarm log

#### 5.1.1 BadLWTReset - Bad Leaving Water Temperature Reset Input

This alarm is generated when the Setpoint Reset option has been enabled and the input to the controller is out of the admitted range.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. LWT Reset function cannot be used. String in the alarm list: BadLWTRreset String in the alarm log: ± BadLWTRreset String in the alarm snapshot BadLWTRreset	LWT reset input signal is out of range. For this warning out of range is considered to be a signal less than 3mA or more than 21mA.	Check for values of input signal to the unit controller. It has to be in the allowed mA range.
		Check for electrical shielding of wirings.
		Check for right value of the unit's controller output in case input signal is into allowed range.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

#### 5.1.2 EnergyMeterComm - Energy Meter Communication Fail

This alarm is generated in case of communication problems with the energy meter.

Symptom	Cause	Solution
Bell icon is moving on controller's display. String in the alarm list: EnergyMeterComm String in the alarm log: ± EnergyMtrComm String in the alarm snapshot EnergyMtrComm	Module has no power supply	Refer to the datasheet of the specific component to see if it is correctly powered
	Wrong cabling with the Unit Controller	Check if the polarity of the connections is respected.
	Modbus parameters not properly set	Referring to the datasheet of the specific component to see if the modbus parameters are set correctly: Address = 20 Baud Rate = 19200 kBs Parity = None Stop bits = 1
	Module is broken	Check if the display shows something and the power supply is present.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

#### 5.1.3 EvapPump1Fault - Evaporator Pump #1 Failure

This alarm is generated if the pump is started but the flow switch is not able to close within the recirculate time. This can be a temporary condition or may be due to a broken flowswitch, the activation of circuit breakers, fuses or to a pump breakdown.

Symptom	Cause	Solution
Unit could be ON. Bell icon is moving on controller's display. Backup pump is used or stop of all circuits in case of pump #2 failure. String in the alarm list: EvapPump1Fault	Pump #1 may not be operating.	Check for problem in electrical wiring of the pump #1.
		Check that electrical breaker of pump #1 is tripped.
		If fuses are used to protect the pump, check the integrity of fuses.

String in the alarm log: ± EvapPump1Fault String in the alarm snapshot EvapPump1Fault		Check for problem in wiring connection between pump starter and unit controller.
		Check the water pump filter and the water circuit for obstructions.
	Flow Switch doesn't operate properly	Check flow switch connection and calibration.
<b>Reset</b>		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	

#### 5.1.4 EvapPump2Fault - Evaporator Pump #2 Failure

This alarm is generated if the pump is started but the flow switch is not able to close within the recirculate time. This can be a temporary condition or may be due to a broken flowswitch, the activation of circuit breakers, fuses or to a pump breakdown.

Symptom	Cause	Solution
Unit could be ON. Bell icon is moving on controller's display. Backup pump is used or stop of all circuits in case of pump #1 failure. String in the alarm list: EvapPump2Fault String in the alarm log: ± EvapPump2Fault String in the alarm snapshot EvapPump2Fault	Pump #2 may not be operating.	Check for problem in electrical wiring of the pump #2.
		Check that electrical breaker of pump #2 is tripped.
		If fuses are used to protect the pump, check the integrity of fuses.
		Check for problem in wiring connection between pump starter and unit controller.
		Check the water pump filter and the water circuit for obstructions.
	Flow Switch doesn't operate properly	Check flow switch connection and calibration.
<b>Reset</b>		
Local HMI Network Auto - Reset	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	

#### 5.1.5 ExternalEvent - External Event

This alarm indicates that a device, whose operation is linked with this machine, is reporting a problem on the dedicated input.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. String in the alarm list: External Event String in the alarm log: ±ExternalEvent String in the alarm snapshot ExternalEvent	There is an external event that has caused the opening, for at least 5 seconds, of the digital input on the controller board.	Check for reasons of external event and if it can be a potential problem for a correct chiller operation.
<b>Reset</b>		
Local HMI Network Auto	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	

#### 5.1.6 HeatRec EntWTempSen - Heat Recovery Entering Water Temperature sensor fault (A/C units only)

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Heat Recovery is Off Bell icon is moving on controller's display. String in the alarm list: HeatRec EntWTempSen String in the alarm log: ± HeatRec EntWTempSen String in the alarm snapshot HeatRec EntWTempSen	Sensor is broken.	Check for sensor integrity, according table and allowed kOhm (kΩ) range.
		Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.
<b>Reset</b>		

Local HMI	<input checked="" type="checkbox"/>
Network	<input checked="" type="checkbox"/>
Auto	<input checked="" type="checkbox"/>

#### 5.1.7 HeatRec LvgWTempSen - Heat Recovery Leaving Water Temperature sensor fault (A/C units only)

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Heat Recovery is Off Bell icon is moving on controller's display. String in the alarm list: HeatRec LvgWTempSen String in the alarm log: ± HeatRec LvgWTempSen String in the alarm snapshot HeatRec LvgWTempSen	Sensor is broken.	Check for sensor integrity. according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors. Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

#### 5.1.8 HeatRec FreezeAlm - Heat Recovery Water Freeze Protect alarm (A/C units only)

This alarm is generated to indicate that the heat recovery water temperature (entering or leaving) has dropped below a safety limit. Control tries to protect the heat exchanger starting the pump and letting the water circulate.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: HeatRec FreezeAlm String in the alarm log: ± HeatRec FreezeAlm String in the alarm snapshot HeatRec FreezeAlm	Water flow too low.	Increase the water flow.
	Inlet temperature to the heat recovery is too low.	Increase the inlet water temperature.
	Sensors readings (entering or leaving) are not properly calibrated	Check the water temperatures with a proper instrument and adjust the offsets
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

#### 5.1.9 Option1BoardComm – Optional board 1 communication fail (A/C units only)

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option1BoardComm String in the alarm log: ± Option1BoardComm String in the alarm snapshot Option1BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module.
		Check if LEDs are both green.
		Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module
		Check if power supply is ok but LEDs are both off. In this case replace the module
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

#### 5.1.10 Option2BoardComm – Optional board 2 communication fail

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately.	Module has no power supply	Check the power supply from the connector on the side of the module.

Bell icon is moving on controller's display. String in the alarm list: Option2BoardComm String in the alarm log: ± Option2BoardComm String in the alarm snapshot Option2BoardComm		Check if LEDs are both green.
		Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module Check if power supply is ok but LEDs are both off. In this case replace the module
<b>Reset</b>		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

#### 5.1.11 Option3BoardComm – Optional board 3 communication fail

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option3BoardComm String in the alarm log: ± Option3BoardComm String in the alarm snapshot Option3BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module. Check if LEDs are both green. Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module Check if power supply is ok but LEDs are both off. In this case replace the module
<b>Reset</b>		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

## 5.2 Unit Pumpdown Alarms

All alarms reported in this section produce a unit stop performed following normal pumpdown procedure.

### 5.2.1 UnitOff EvpEntWTempSen - Evaporator Entering Water Temperature (EWT) sensor fault

This alarm is generated any time the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvpEntWTempSen String in the alarm log: ± UnitOff EvpEntWTempSen String in the alarm snapshot UnitOff EvpEntWTempSen	Sensor is broken.	Check for sensor integrity, according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts. Check for correct plug-in of the electrical connectors. Check for correct sensors wiring also according electrical scheme.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.2.2 UnitOffLvgEntWTempSen - Evaporator Leaving Water Temperature (LWT) sensor fault

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOffLvgEntWTempSen String in the alarm log: ± UnitOffLvgEntWTempSen	Sensor is broken.	Check for sensor integrity, according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.

String in the alarm snapshot UnitOffEvapLvgWTempSen		Check for correct plug-in of the electrical connectors. Check for correct sensors wiring also according electrical scheme.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.2.3 UnitOffAmbTempSen - Outside Air Temperature sensor fault (A/C units only)

This alarm is generated any time the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOffAmbTempSen String in the alarm log: ± UnitOffAmbTempSen String in the alarm snapshot UnitOffAmbTempSen	Sensor is broken.	Check for sensor integrity.
		Check correct sensors operation according table and allowed kOhm (kΩ) range.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

## 5.3 Unit Rapid Stop Alarms

All alarms reported in this section produce an instantaneous stop of the unit.

### 5.3.1 UnitOffEvapWaterTmpLow - Evaporator Water Temperature Low alarm

This alarm is generated to indicate that the water temperature (entering or leaving) has dropped below a safety limit. Control tries to protect the heat exchanger starting the pump and letting the water circulate.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvapWaterTmpLow String in the alarm log: ± UnitOff EvapWaterTmpLow String in the alarm snapshot UnitOff EvapWaterTmpLow	Water flow too low.	Increase the water flow.
	Inlet temperature to the evaporator is too low.	Increase the inlet water temperature.
	Flow switch is not working or no water flow.	Check the flow switch and the water pump.
	Sensors readings (entering or leaving) are not properly calibrated.	Check the water temperatures with a proper instrument and adjust the offsets
	Wrong freeze limit setpoint.	The freeze limit has not been changed as a function of glycol percentage.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.3.2 UnitOff ExternalAlarm - External alarm

This alarm is generated to indicate that an external device whose operation is linked with this unit operation. This external device could be a pump or an inverter.

Symptom	Cause	Solution
Unit status is Off. All circuits are switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOff ExternalAlarm String in the alarm log: ± UnitOff ExternalAlarm String in the alarm snapshot UnitOff ExternalAlarm	There is an external event that has caused the opening, for at least 5 seconds, of the port on the controller board.	Check causes of the external event or alarm.
		Check electrical wiring from unit controller to the external equipment in case of any external events or alarms have been occurred.

Reset	
Local HMI	<input type="checkbox"/>
Network	<input type="checkbox"/>
Auto	<input checked="" type="checkbox"/>

### 5.3.3 PVM alarm (A/C units only)

This alarm is generated in case of problems with the power supply to the chiller.



**Resolution of this fault requires a direct intervention on the power supply of this unit.**  
**Direct intervention on the power supply can cause electrocution, burns or even death. This action must be performed only by trained persons. In case of doubts contact your maintenance company.**

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff PVM String in the alarm log: ± UnitOff PVM String in the alarm snapshot UnitOff PVM	Loss of one phase.	Check voltage level on each of the phases.
	Not correct sequence connection of L1,L2,L3.	Check sequence of L1, L2, L3 connections according indication on chiller's electrical scheme.
	Voltage level on the unit's panel is not in the allowed range (±10%).	Check that voltage level on each phases is into the allowed range that is indicated on the chiller label. Is important to check the voltage level on each phases not only with chiller not running, but mainly with chiller running from minimum capacity up to full load capacity. That's because voltage drop can occur from a certain unit cooling capacity level, or because of certain working condition (i.e. high values of OAT); In these cases the issue can be related with the sizing of power cables.
	There is a short-circuit on the unit.	Check for correct electrical isolation condition of each unit's circuit with a Megger tester.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.3.4 UnitOff EvapWaterFlow - Evaporator Water Flow Loss alarm

This alarm is generated in case of flow loss to the chiller to protect the machine against freezing.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvapWaterFlow String in the alarm log: ± UnitOff EvapWaterFlow String in the alarm snapshot UnitOff EvapWaterFlow	No water flow sensed for 3 minutes continuously or water flow too low.	Check the water pump filler and the water circuit for obstructions.
		Check the flow switch calibration and adapt to minimum water flow.
		Check if pump impeller can rotate freely and has no damages.
		Check pumps protection devices (circuit breakers, fuses, inverters, etc.)
		Check if water filter is clogged.
		Check flow switch connections.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

### 5.3.5 UnitOff EXVDriverComm - EXV Driver Extension Communication Error

This alarm is generated in case of communication problems with the EEXV module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EXVDriverComm String in the alarm log: ± UnitOff EXVDriverComm String in the alarm snapshot	Module has no power supply	Check the power supply from the connector on the side of the module.
		Check if LEDs are both green.
		Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.



UnitOff EXVDriverComm	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module Check if power supply is ok but LEDs are both off. In this case replace the module
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

## 5.4 Circuit Pumpdown Stop Alarms

All alarms reported in this section produce a circuit stop performed following normal pumpdown procedure.

### 5.4.1 Discharge Temperature Sensor fault

This alarm is generated to indicate that the sensor is not reading properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: CxComp1 OffDischTmpSen String in the alarm log: ± CxComp1 OffDischTmpSen String in the alarm snapshot CxComp1 OffDischTmpSen	Sensor is shorted.	Check for sensor integrity. Check correct sensors operation according information about kOhm (kΩ) range related to temperature values.
	Sensor is broken.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
	Check for correct sensors wiring also according with electrical scheme.	
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.4.2 CxOff OffSuctTempSen - Suction Temperature Sensor fault

This alarm is generated to indicate that the sensor is not reading properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: CxOff OffSuctTempSen String in the alarm log: ± CxOff OffSuctTempSen String in the alarm snapshot CxOff OffSuctTempSen	Sensor is shorted.	Check for sensor integrity.
		Check correct sensors operation according information about kOhm (kΩ) range related to temperature values.
	Sensor is broken.	Check if sensor is shorted with a resistance measurement.
	Sensor is not good connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
Check for correct sensors wiring also according with electrical scheme.		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.4.3 CxOff GasLeakage - Gas Leakage fault

This alarm indicates a gas leakage in the compressor box.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the shutdown procedure performing a deep pumpdown of the circuit. Bell icon is moving on controller's display. String in the alarm list: CxOff GasLeakage String in the alarm log:	Gas leakage in the compressors box (A/C units).	Switch off the unit and perform a gas leakage test.
	Gas Leakage in the plant room.	Check if there are leakage on the unit with a detector eventually starting suction fans to change the air in the room.

± CxOff GasLeakage String in the alarm snapshot CxOff GasLeakage	Gas leakage sensor fault.	Put the sensor in open air and check that the alarm can be cleared. In case replace the sensor or disable the option before getting a new part.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

## 5.5 Circuit Rapid Stop alarms

All alarms reported in this section produce an instantaneous stop of the circuit.

### 5.5.1 CxOff CondPressSen - Condensing Pressure sensor fault

This alarm indicates that the condensing pressure transducer is not operating properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff CondPressSen String in the alarm log: ± CxCmp1 CondPressSen String in the alarm snapshot CxCmp1 CondPressSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.5.2 CxOff EvapPressSen - Evaporating Pressure sensor fault

This alarm indicates that the evaporating pressure transducer is not operating properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff EvapPressSen String in the alarm log: ± CxOff EvapPressSen String in the alarm snapshot CxOff EvapPressSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
	Check for correct sensors wiring also according electrical scheme.	
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.5.3 CxOff DischTmpHigh - High Discharge Temperature Alarm

This alarm indicates that the temperature at the discharge port of the compressor exceeded a maximum limit which may cause damages to the mechanical parts of the compressor.



When this alarm occurs compressor's crankcase and discharge pipes may become very hot. Be careful when getting in contact with the compressor and discharge pipes in this condition.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff DischTmpHigh String in the alarm log: ± CxOff DischTmpHigh String in the alarm snapshot CxOff DischTmpHigh	Liquid Injection solenoid valve is not operating properly.	Check the electrical connection between the controller and the liquid injection solenoid valve.
		Check if the solenoid coil operates properly
	Liquid injection orifice is small.	Check if the digital output operates correctly.
		Check if when the liquid injection solenoid is activated the temperature can be controlled between the limits.
		Check that the liquid injection line is not obstructed by observing the discharge temperature when it is activated.
	Discharge temperature sensor could not operate properly.	Check for proper operation of the discharge temperature
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

#### 5.5.4 CxOff CondPressHigh – High Condensing Pressure alarm

This alarm is generated in case the Condensing saturated temperature rise above the Maximum condensing saturated temperature and the control is not able to compensate to this condition.

In case of water cooled chillers operating at high condenser water temperature, if the Condensing saturated temperature exceeds the Maximum condenser saturated temperature, the circuit is only switched off without any notification on the screen as this condition is considered acceptable in this range of operation.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff CondPressHigh String in the alarm log: ± CxOff CondPressHigh String in the alarm snapshot CxOff CondPressHigh	One or more condenser fans do not operate properly (A/C units).	Check if fans protections have been activated.
		Check that the fans can turn freely.
		Check that there is not any obstacle to the free ejection of the air blown.
	Condenser pump may not be operating correctly (W/C units)	Check if the pump can run and give the required water flow.
	Dirty or partially blocked condenser coil (A/C units).	Remove any obstacle; Clean the condenser coil using soft brush and blower.
	Dirty condenser heat exchanger (W/C units)	Clean the condenser heat exchanger.
	Inlet air temperature of the condenser is too high (A/C units).	The air temperature measured at the inlet of the condenser may not exceed the limit indicated in the operational range (working envelope) of the chiller.
		Check the location where the unit is installed and check that there are no any short circuit of the hot-air blown from the fans of the same unit, or even from fans of next chillers (Check IOM for proper installation).
	Entering water temperature at condenser is too high (W/C units).	Check the cooling tower operation and settings.
		Check the three way valve operation and settings.
	One or more condenser fan turning in wrong direction (A/C units).	Check for correct phases sequence (L1, L2, L3) in the electrical connection of the fans.
	Excessive charge of refrigerant into the unit.	Check liquid sub-cooling and suction super-heat to control indirectly the correct charge of refrigerant. If necessary recover all the refrigerant to weight the entire charge and to control if the value is in line with kg indication on unit label.
	Condensing pressure transducer could not operate properly.	Check for proper operation of the high pressure sensor.
	Wrong unit configuration (W/C units).	Check that the unit has been configured for high condenser temperature applications.
Reset		

Local HMI	<input checked="" type="checkbox"/>
Network	<input checked="" type="checkbox"/>
Auto	<input type="checkbox"/>

### 5.5.5 CxOff EvapPressLow - Low Pressure alarm

This alarm is generated in case the evaporating pressure drops below the Low Pressure Unload and the control is not able to compensate to this condition.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped immediately. Bell icon is moving on controller's display. String in the alarm list: CxOff EvapPressLow String in the alarm log: ± CxOff EvapPressLow String in the alarm snapshot CxOff EvapPressLow	Transitory condition like a fan staging (A/C units).	Wait until the condition is recovered by EXV control
	Refrigerant charge is low.	Check sight glass on liquid line to see if there is flash gas. Measure sub-cooling to see if the charge is correct.
	Protection limit not set to fit customer application.	Check the evaporator approach and the corresponding water temperature to evaluate the low pressure hold limit.
	High Evaporator Approach.	Clean the evaporator Check the quality of the fluid that flows into heat exchanger. Check the glycol percentage and type (ethilenic or propilenic)
	Water flow into water heat exchanger is too low.	Increase the water flow. Check that evaporator water pump is operating correctly providing the required water flow.
	Evaporating pressure transducer is not working properly.	Check the sensor for proper operation and calibrate the readings with a gauge.
	EEXV is not working correctly. It's not opening enough or it's moving in the opposite direction.	Check if pump-down can be finished for pressure limit reached; Check expansion valve movements. Check connection to the valve driver on the wiring diagram. Measure the resistance of each winding, it has to be different from 0 Ohm.
	Water temperature is low	Increase inlet water temperature. Check the low pressure safeties settings.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

### 5.5.6 CxOff RestartFault – Restart Fault

This alarm is generated when the compressor internal protection trips

Symptom	Cause	Solution
Compressor X is Off Bell icon is moving on controller's display. String in the alarm list: CxOff RestartFault String in the alarm log: ± CxOff RestartFault String in the alarm snapshot CxOff RestartFault	This alarm is generated after 165 seconds from circuit start if the evaporating pressure is lower than the Low Pressure Unload Limit. If this alarm is triggered means that the unit is working with too low outside ambient temperature or refrigerant charge is not properly set	Refer to the Low Pressure alarm.
<b>Reset</b>		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

### 5.5.7 CxOff MechHighPress - Mechanical High Pressure Alarm

This alarm is generated when the condenser pressure rises above the mechanical high pressure limit causing this device to open the power supply to all the auxiliary relays. This causes an immediate shutdown of compressor and all the other actuators in this circuit.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff MechHighPress String in the alarm log: ± CxOff MechHighPress String in the alarm snapshot CxOff MechHighPress	One or more condenser fans do not operate properly(A/C units).	Check if fans protections have been activated. Check that the fans can turn freely. Check that there is not any obstacle to the free ejection of the air blown.
	Condenser pump may not be operating correctly (W/C units)	Check if the pump can run and give the required water flow.
	Dirty or partially blocked condenser coil (A/C units).	Remove any obstacle; Clean the condenser coil using soft brush and blower.
	Dirty condenser heat exchanger (W/C units)	Clean the condenser heat exchanger.
	Inlet air temperature of the condenser is too high (A/C units).	The air temperature measured at the inlet of the condenser may not exceed the limit indicated in the operational range (working envelope) of the chiller (A/C units). Check the location where the unit is installed and check that there are no any short circuit of the hot-air blown from the fans of the same unit, or even from fans of next chillers (Check IOM for proper installation).
	One or more condenser fan turning in wrong direction.	Check for correct phases sequence (L1, L2, L3) in the electrical connection of the fans.
	Entering water temperature at condenser is too high (W/C units).	Check the cooling tower operation and settings. Check the three way valve operation and settings.
	Mechanical high pressure switch is damaged or not calibrated.	Check for proper operation of the high pressure switch.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

### 5.5.8 CxOff NoPressChange - No Pressure Change At Start Alarm

This alarm indicates that the compressor is not able to start or to create a certain minimum variation of the evaporating or condensing pressures after start.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff NoPressChange String in the alarm log: ± CxOff NoPressChange String in the alarm snapshot CxOff NoPressChange	Compressor cannot start	Check if the start signal is properly connected to the inverter.
	Compressor is turning in wrong direction.	Check correct phases sequence to the compressor (L1, L2, L3) according to the electrical scheme. Inverter is not properly programmed with the right direction of rotation
	Refrigerant circuit is empty of refrigerant.	Check circuit pressure and presence of refrigerant.
	Not proper operation of evaporating or condensing pressure transducers.	Check proper operation of evaporating or condensing pressure transducers.
<b>Reset</b>		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

### 5.5.9 Cx FailedPumpdown - Failed Pumpdown procedure

This alarm is generated to indicate that the circuit hadn't been able to remove all the refrigerant from the evaporator. It automatically clear as soon as the compressor stops just to be logged in the alarm history. It may not be recognized from BMS because the communication latency can give enough time for the reset. It may not even be seen on the local HMI.

Symptom	Cause	Solution
Circuit status is Off. No indications on the screen String in the alarm list: -- String in the alarm log: ± Cx FailedPumpdown String in the alarm snapshot Cx FailedPumpdown	EEXV is not closing completely, therefore there's "short-circuit" between high pressure side with low pressure side of the circuit.	Check for proper operation and full closing position of EEXV. Sight glass should not show refrigerant flow after the valve is closed.
	Evaporating pressure sensor is not working properly.	Check LED on the top of the valve, C LED should be solid green. If both LED are blinking alternately the valve motor is not properly connected.
	Compressor on circuit is internally damaged with a mechanical problems for example on internal check-valve, or on internal spirals or vanes.	Check compressors on circuits.
Reset		
Local HMI Network Auto	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	

#### 5.5.10 CmpX Protection – Compressor Protection

This alarm is generated when the compressor internal protection trips

Symptom	Cause	Solution
Compressor X is Off Bell icon is moving on controller's display. String in the alarm list: CmpX Protection String in the alarm log: ± CmpX Protection String in the alarm snapshot CmpX Protection	Compressor motor PTC. Compressor discharge port PTC.	Compressors is damaged
		Compressor is working out of its operating limits
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	

*The present publication is drawn up by of information only and does not constitute an offer binding upon Daikin Applied Europe S.p.A.. Daikin Applied Europe S.p.A. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content, and the products and services presented therein. Specification are subject to change without prior notice. Refer to the data communicated at the time of the order. Daikin Applied Europe S.p.A. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Applied Europe S.p.A..*

**DAIKIN APPLIED EUROPE S.p.A.**

Via Piani di Santa Maria, 72 - 00072 Ariccia (Roma) - Italia

Tel: (+39) 06 93 73 11 - Fax: (+39) 06 93 74 014

<http://www.daikinapplied.eu>